



WHEEL WEIGHER **AXC**


User Manual

v.201811



Value Each Gram




1. Open the cartons: two pads, four ramps, one indicator.

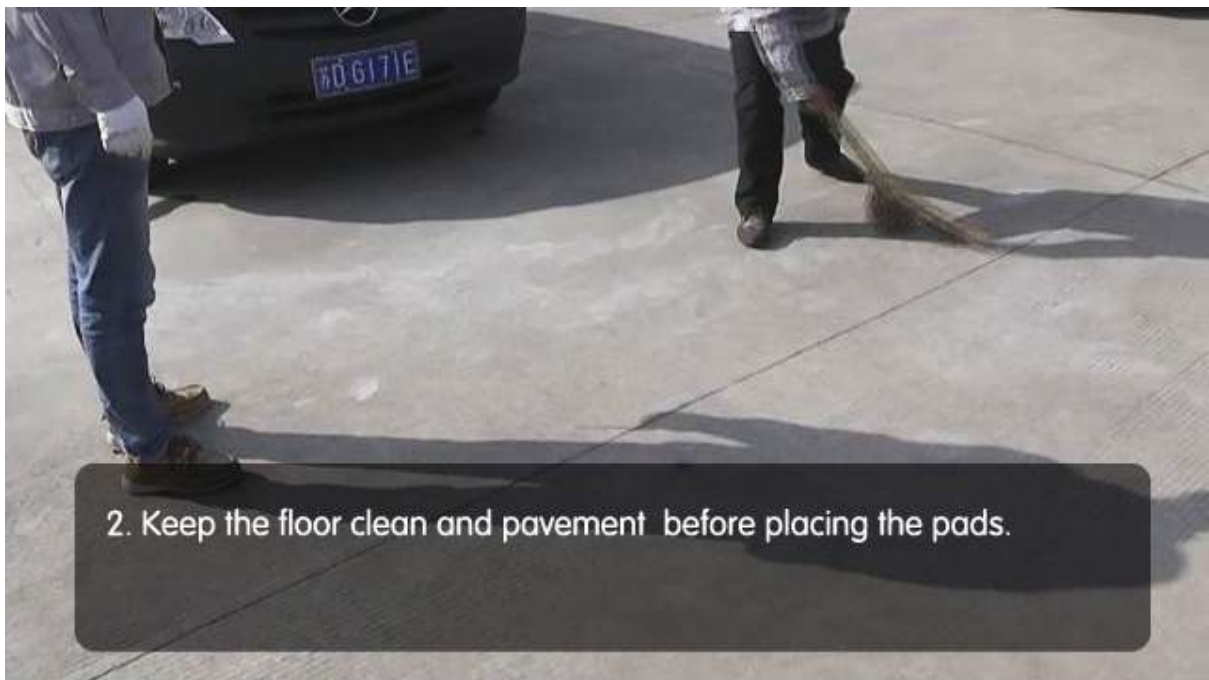

2. Keep the floor clean and pavement before placing the pads.

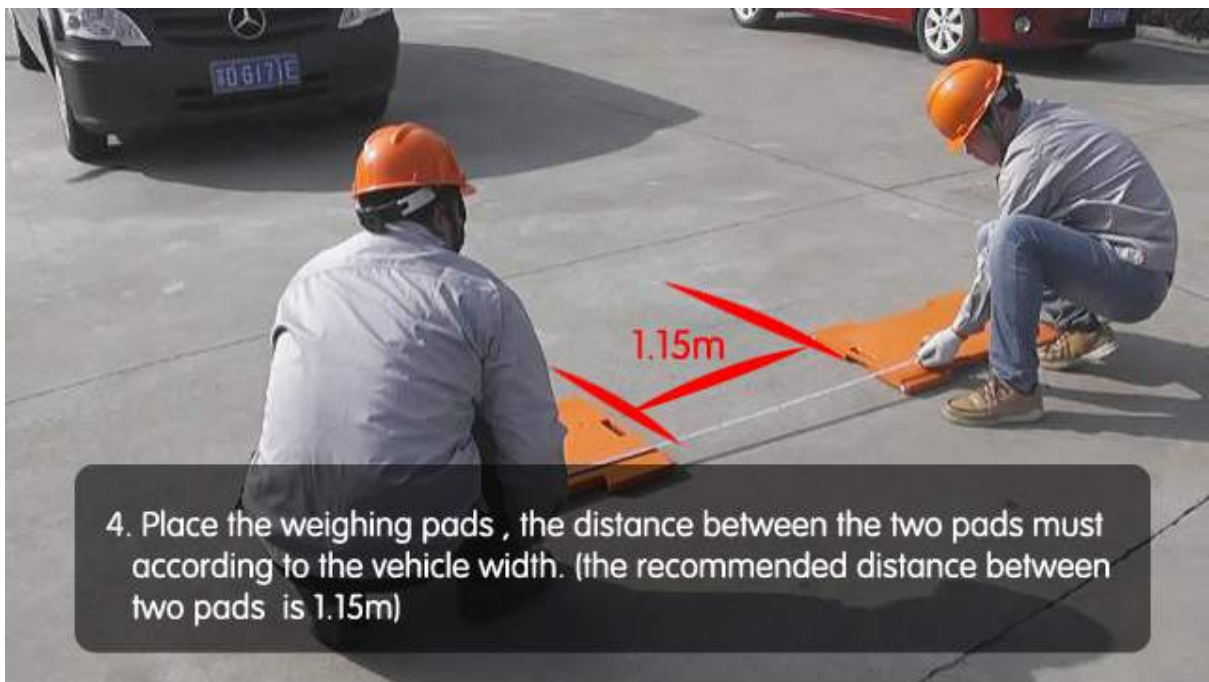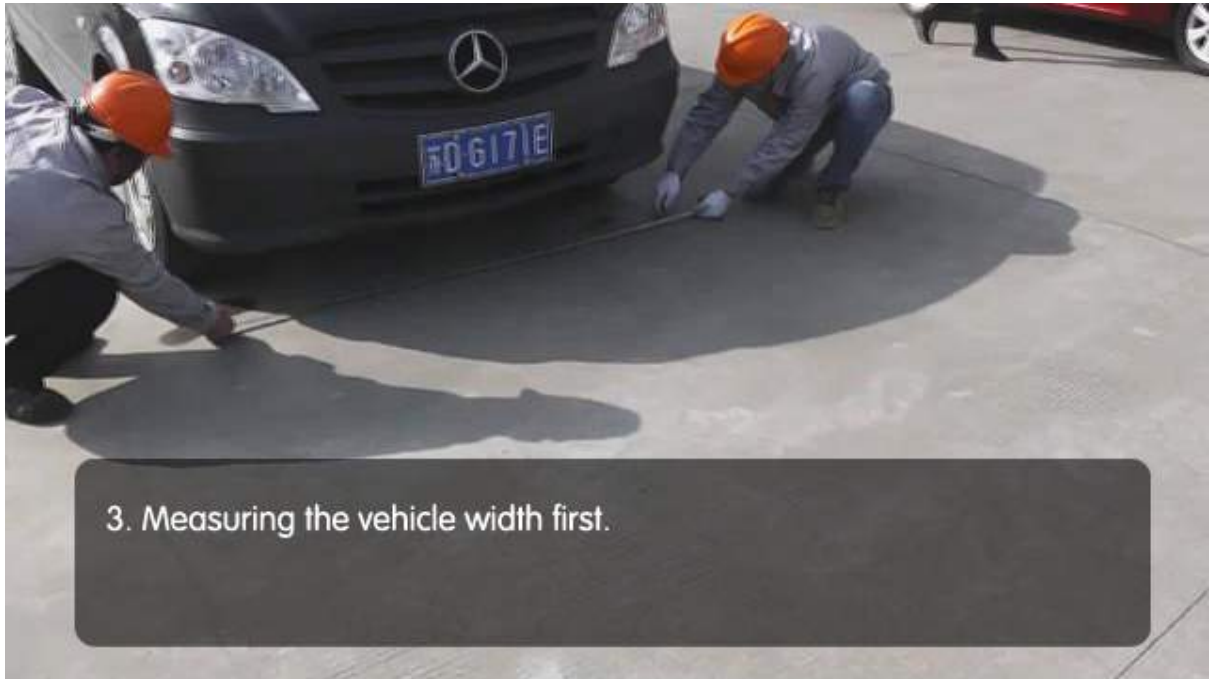



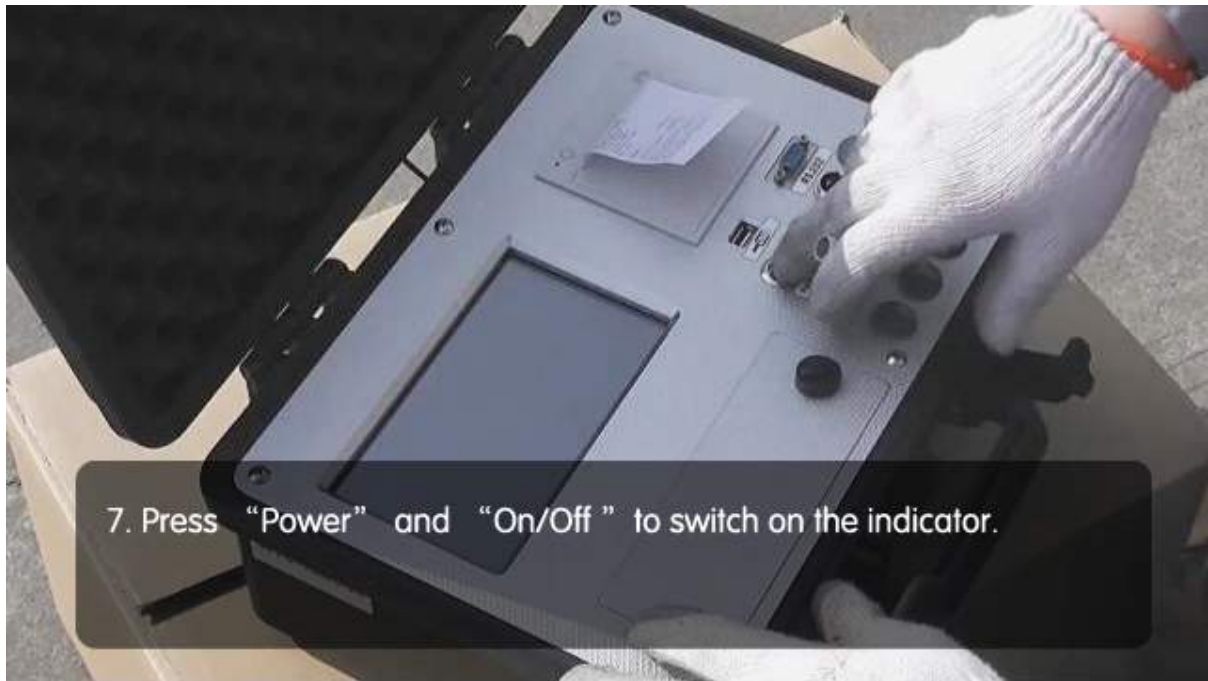

7. Press "Power" and "On/Off" to switch on the indicator.



8. Switch on the two weighing pads with the magnetic switch.
(in the indicator tool box)





11. After the vehicle completely passed the weighing pads, the indicator will give a total weight and print if automatically printing function is selected. Then you can start next vehicle weighing.



v.201811
User Manual
AXC