



RETAIL PRINTING SCALE **PCT**

User Manual

v.201811

Value Each Gram

Explanation about manual

Name: using manual for PCT model







This manual has been prepared for various models with same body that have built at Our Company. So, some content of this manual may not use on your device.

Our Company keeps the right to do any changes in any time as a permanent policy in improving and upgrading of the products


[OPERATING INSTRUCTIONS OF PCT]

Included accessories

You have purchased a product that it includes the following components:

 <p>A metal plate</p>	 <p>A scale model of PCT</p>
 <p>A using manual</p>	 <p>AC power cable</p>
 <p>A plastic plate</p>	 <p>A guarantee card</p>

Device dimensions and technical specifications

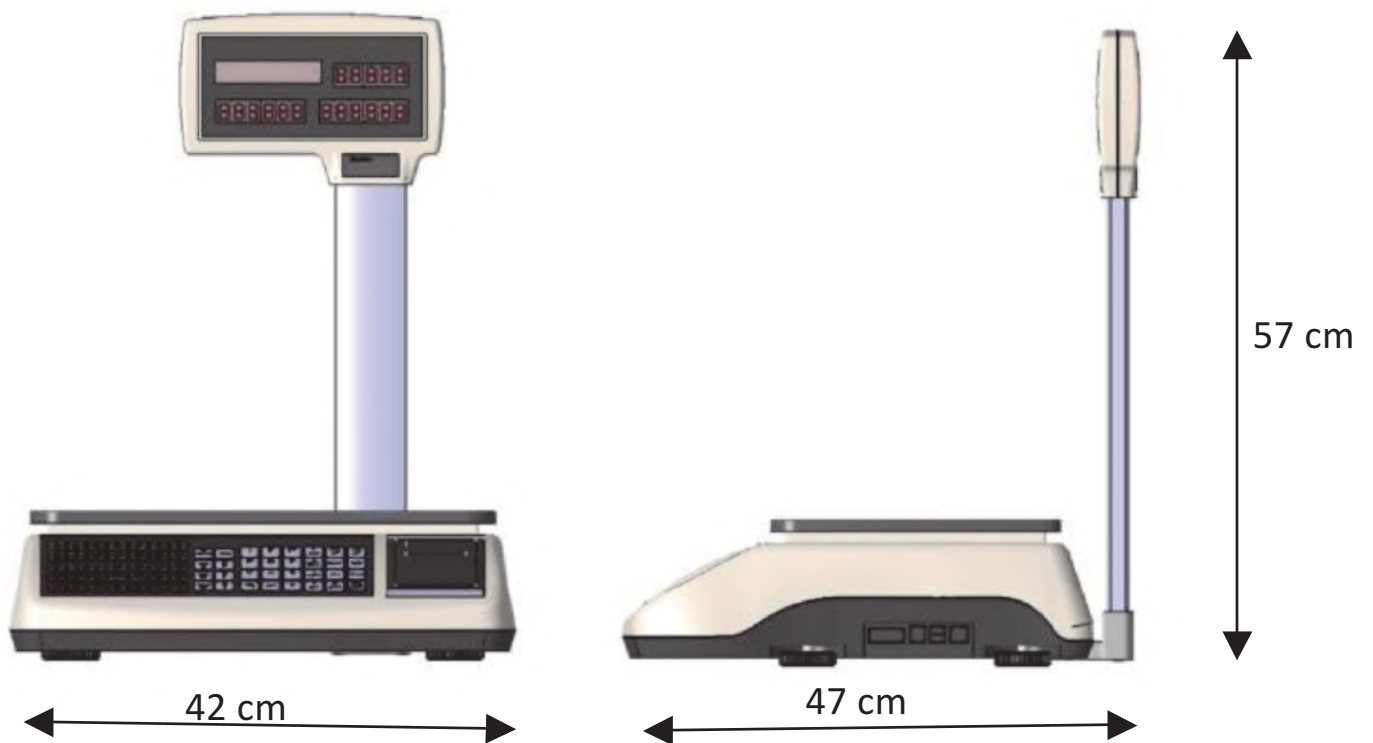

[OPERATING INSTRUCTIONS OF PCT]

Introducing the device

- Easy using
- Weighing Specification

Option 1

Maximum
capacity:30kg

Minimum capacity:100g
Accuracy:5/10g

Option 2

Maximum
capacity:15kg

Minimum capacity:40g

Accuracy:2/5g

- Ability to use A/C power and rechargeable battery
- Register the receipt for several goods, tare, quantity sell, change, discount, calculator, set date & time, service to 3 customers at the same time, daily and periodic report of sale in PLUs and Query PLUs
- Thermal printer to print receipt and reports
- 10,000 PLUs to register name, price, barcode, 70 direct memory to quick access
- Double side display that is able to show weight in 5 digits, unit price in 6 digits and total price in 7 digits




[OPERATING INSTRUCTIONS OF PCT]

- connect to cash, barcode reader, network and u-disk

Installing guidance

Assemble the scale parts as below picture

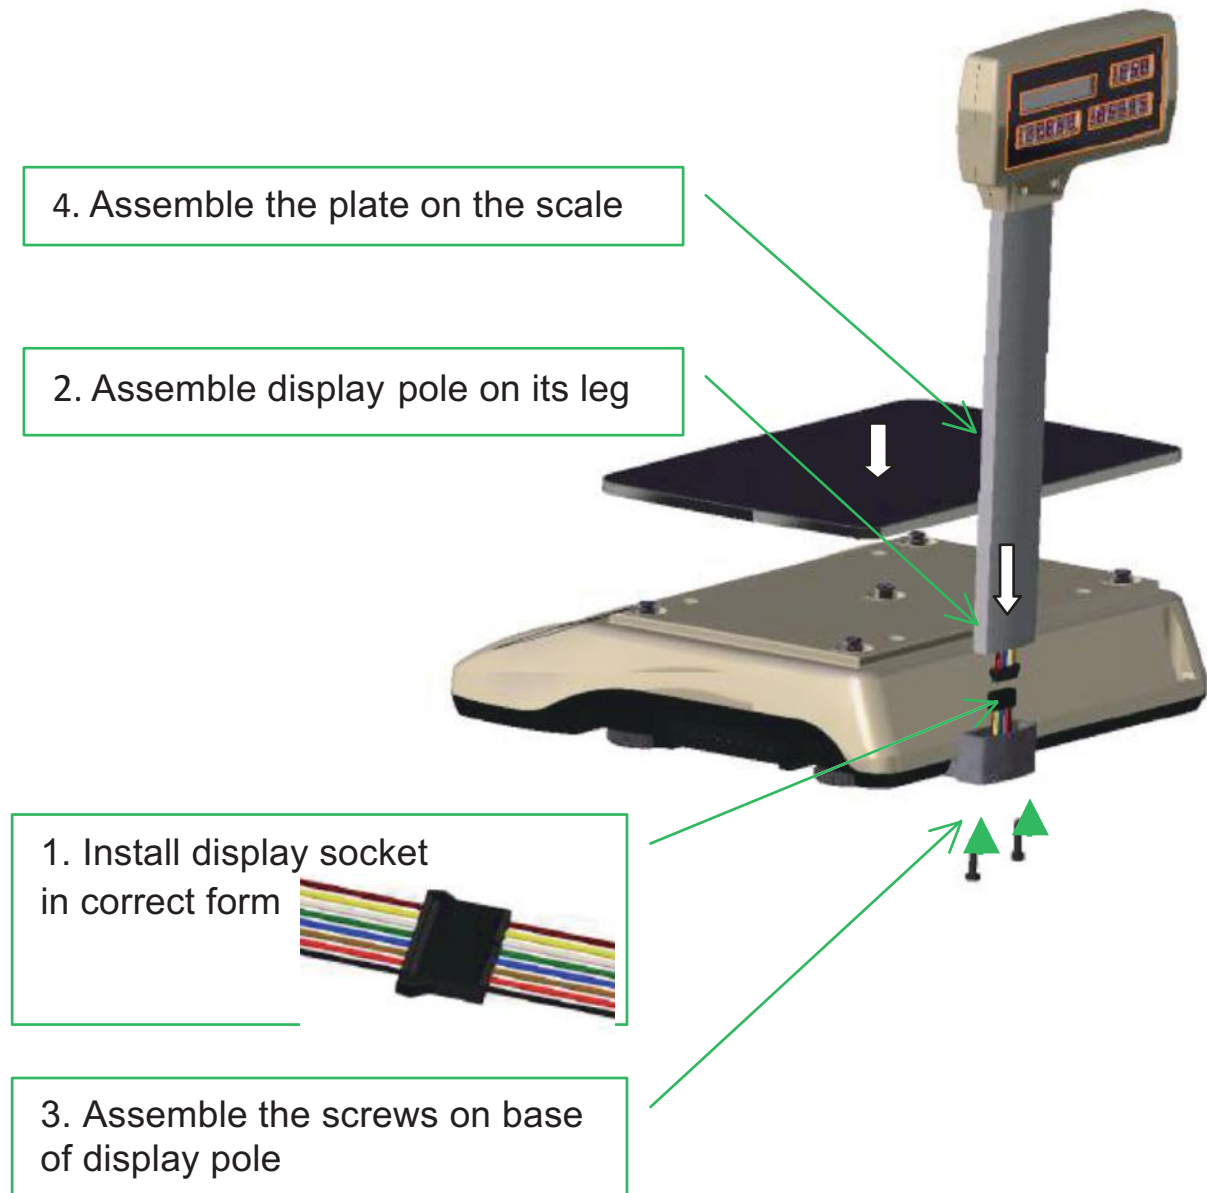

[OPERATING INSTRUCTIONS OF PCT]

Table of content

1. Starting guide	9
2. Introducing keyboard	10
3. Quick accessing and shortcuts guide.....	12
3.1. Type letters and numbers	12
3.2. Moving on the menus	12
3.3. Shortcuts keys	12
4. General using of device	14
4.1. Weighing	14
4.2. Calculate price of goods	14
4.3. Adding	15
4.4. Print receipt.....	15
4.5. Tare	16
4.6. Access to PLUs	16
4.7. Save information in PLU	17
4.8. Calculator	18
4.9. Receipt.....	18
4.9.1. Register the receipt	18
4.9.2. Void One, Void All.....	18

[OPERATING INSTRUCTIONS OF PCT]

4.9.3. Discount.....	19
4.9.4. Change.....	20
4.9.5. Print	20
5. Usage of Menu	21
5.1. Menu Operation Method	21
5.2. PLUs.....	21
5.2.1. Save the good's information in PLU	21
5.1.2. Department set	23
5.1.3. Hot-keys setting.....	23
5.2.4. print content of direct PLUs	25
5.2.5. Default PLUs	25
5.2.6. Print content of default PLUs	26
5.3. Print setting.....	26
5.3.1. Title font size	26
5.3.2. Head and tail title	27
5.3.3. Reprint number	28
5.3.4. Font gray scale.....	28
5.4. Other setting	29
5.4.1. Date and time	29

[OPERATING INSTRUCTIONS OF PCT]

5.4.2. Beep sound	30
5.4.3. Device number	31
5.4.4 Supporting one to three customers	31
5.4.5. Currency	32
5.5. The reports	33
5.5.1. Daily Report	33
5.5.2. PLU report	33
5.5.3. Query PLU Report	34
5.5.4. Period Report	35
5.5.5 PLU Period Report	36
5.5.6 Query PLU Period Report	37
5.5.7 Clear- out the reports	38
5.6. User set	39
6. Errors and Alarms	40
Precautions	43
Appendix one: Menus list and functions outlined	45


[OPERATING INSTRUCTIONS OF PCT]

1. Starting guide

1. put the scale on proper place and
2. connect the A/C power cable to its place as below picture, then
3. balance it by scale legs
4. after make sure to balance, turn it on with on-off key.

Use on-off key, when do not use the scale for a Long time, in normal condition you can turn on-off the scale by on-off key on the keyboard.



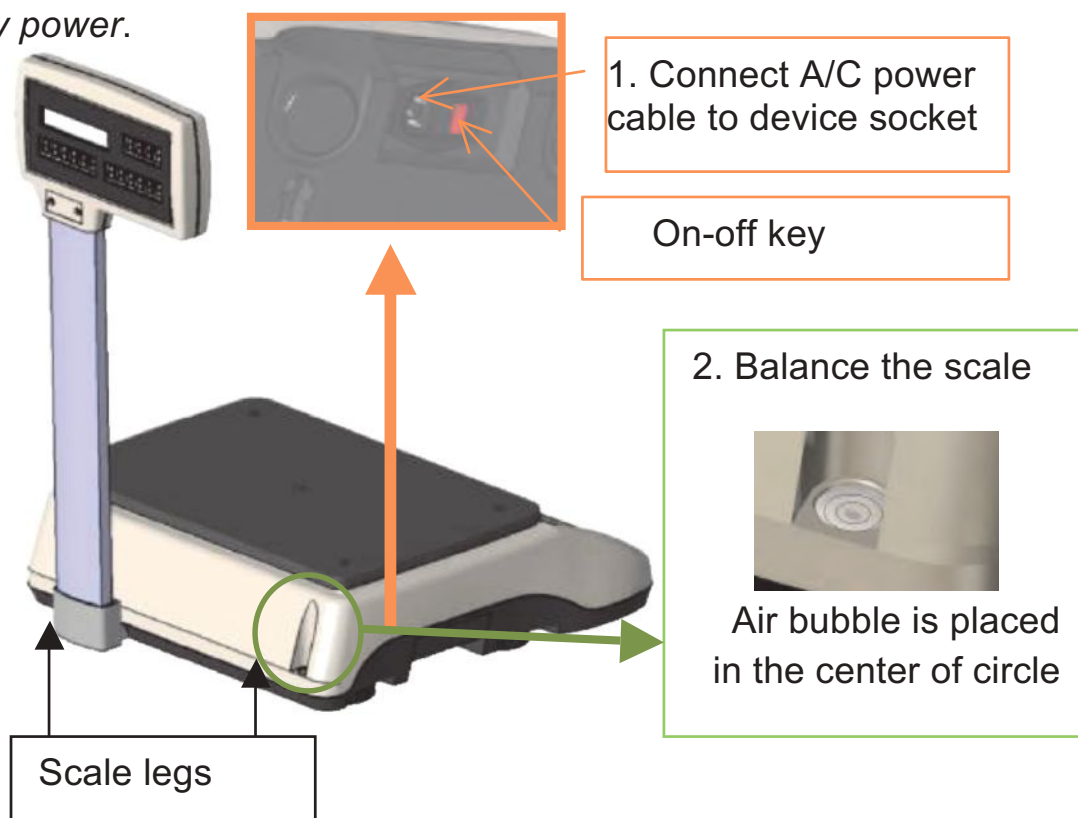











Pay attention that whole time working with the scale connect it to city power.







 

 


The scale will test the internal parts while is turned on and show zero in weight window, if does not show zero, you can be zero with zero key.

[OPERATING INSTRUCTIONS OF PCT]

2. Introducing keyboard


Key	Operation
you can turn on-off the scale, or total out of Menu	
clean the entered information	
calculate price of sold goods	
Printing	
can zero manually during non-weighing Attn: cannot use this key for tare	
Register the receipt, show the result in calculator part, confirm	
Delete weight of container from its content	
Register and show memory and move to right	
Direct memory key	
Change the letters to numbers and inverse during enter The information, select the memory from 36 to 70	
show menu, move on options to upside	
calculate repayment, move to downside	
Register, move to leftside	
Active to response to a customer, active the receipt of First customer	

[OPERATING INSTRUCTIONS OF PCT]

Active receipt of second customer																																																																														
Active to response to three customers at the same time, Active receipt of third customer																																																																														
Register sale of some goods, operation of multiplication																																																																														
Opening calculator windows, operation of																																																																														
Calculate discount, operation of subtraction																																																																														
Delete all items in receipt																																																																														
Delete one item in receipt, in menu back to pervious page																																																																														
Open the cash																																																																														
<table border="1"> <thead> <tr> <th>key</th> <th colspan="6">EN letter</th> </tr> </thead> <tbody> <tr> <td>1</td> <td></td> <td></td> <td></td> <td>?</td> <td>,</td> <td>.(dot)</td> </tr> <tr> <td>2</td> <td></td> <td></td> <td></td> <td>C</td> <td>B</td> <td>A</td> </tr> <tr> <td>3</td> <td></td> <td></td> <td></td> <td>F</td> <td>E</td> <td>D</td> </tr> <tr> <td>4</td> <td></td> <td></td> <td></td> <td>I</td> <td>H</td> <td>G</td> </tr> <tr> <td>5</td> <td></td> <td></td> <td></td> <td>L</td> <td>K</td> <td>J</td> </tr> <tr> <td>6</td> <td></td> <td></td> <td></td> <td>O</td> <td>N</td> <td>M</td> </tr> <tr> <td>7</td> <td></td> <td></td> <td>S</td> <td>R</td> <td>Q</td> <td>P</td> </tr> <tr> <td>8</td> <td></td> <td></td> <td></td> <td>V</td> <td>U</td> <td>T</td> </tr> <tr> <td>9</td> <td></td> <td></td> <td>Z</td> <td>Y</td> <td>X</td> <td>W</td> </tr> <tr> <td>0</td> <td>:</td> <td>]</td> <td>[</td> <td>)</td> <td>(</td> <td>@</td> </tr> </tbody> </table>	key	EN letter						1				?	,	.(dot)	2				C	B	A	3				F	E	D	4				I	H	G	5				L	K	J	6				O	N	M	7			S	R	Q	P	8				V	U	T	9			Z	Y	X	W	0	:]	[)	(@	
key	EN letter																																																																													
1				?	,	.(dot)																																																																								
2				C	B	A																																																																								
3				F	E	D																																																																								
4				I	H	G																																																																								
5				L	K	J																																																																								
6				O	N	M																																																																								
7			S	R	Q	P																																																																								
8				V	U	T																																																																								
9			Z	Y	X	W																																																																								
0	:]	[)	(@																																																																								



 


3. Quick accessing and shortcuts guide

3.1. Type letters and numbers

To enter the information like register memory or up and down title, for change the letters to numbers or inverse, use  key.

 
3.2. Moving on the menus

To reach options of menus, you can do in two ways as below:








1. Use , ,  and  keys to select intended item and press  key to enter intended menu
2. Use number keys, enter number of each item by number keys to open intended window.

3.3. Shortcuts keys

To easy and quick reach to different part of list, you can press below keys for two seconds:

 -  Press: Print current receipt or feed paper.
Double Press: Enter Report Menu
Long Press: Print last receipt

[OPERATING INSTRUCTIONS OF PCT]

-  Active to service one customer
-  Active to service three customers at the same time
-  Register information of memory
-  Clean all entered information in one line
-   Register new information during its arrival
-  Register new information during its arrival

[OPERATING INSTRUCTIONS OF PCT]

4. General using of device

4.1. Weighing

Put the goods on the plate and read its weight in weight window.




4.2. Calculate price of goods

1. Enter unit price of weight by number keys and Unit Price window will show it. So Total price of goods- base on its weight and price – will appear in total price window.



Number keys

To correct price of goods, you can use  key

To enter price of goods, you can use PLU keys.



PLU keys

[OPERATING INSTRUCTIONS OF PCT]

4.3. Adding

To calculate the sold items and register in receipt:

1. Put first goods on the plate
2. Enter unit price
3. Press Add key

In this case, the display will show quantity of added goods and total price.


 


You can do adding operation till 50 times

4. To register sold items in receipt, press  key.

4.4. Print receipt

Printing the receipt

1. Enter sold items
2. Press  key
3. Press  key

[OPERATING INSTRUCTIONS OF PCT]

4.5. Tare


If need to remove weight of goods on the scale or container from new goods, you can use tare key as below:

1. Put goods or container on the scale
2. Press tare key to show zero on the display
3. Add the second goods to first goods or container and see its weight and price on display

For back to first mode, you should pick up all goods from plate and re-press tare key to shown zero on the display.

4.6. Access to PLUs

- ✓ Usage of saved information in 10,000 PLUs:


1. Press  key
2. Enter number of intended PLU
3. Wait for 2 second

Your desired item will be shown in sale list

- ✓ To select 1 to 35 PLUs, press the desired PLU hotkey



[OPERATING INSTRUCTIONS OF PCT]

- ✓ To select 36 to 70 PLU, press  key first, then select the desired PLU hotkey, your intended goods will be shown in sale list

4.7. Save information in PLU

1. Press  key for two seconds to select number of memory

Please Input PLU number:

**

Press Register key

2. Enter number of desired memory

3. Press 

If you want to save in direct memories, press memory key instead of step 2 and 3

1. Enter information of goods in opened page

PLU No: ** 






Name: ****

Unit Price: ****

Press [OK] to save


2. Press 

4.8. Calculator

1. Press  key, the device will enter in calculator part
2. Calculate by using number keys and keys of , , , & .



4.9. Receipt

4.9.1. Register the receipt

1. Enter sale items
2. Press  key to register desired receipt

4.9.2. Void One, Void All

✓ Void One:



1. Select your desired goods of shopping list by  &  keys.


[OPERATING INSTRUCTIONS OF PCT]

2. Press  key.




- ✓ Void All:

3. Press key , a window will be opened to get a confirmation
4. Select yes or no
5. Press  key

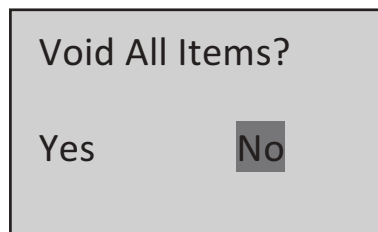

 4.9.3. Discount

1. After register the receipt, press  key, a window will be opened to enter amount of discount


[OPERATING INSTRUCTIONS OF PCT]

Discount amount:

2. Enter amount of discount

3. Press  key

4.9.4. Change

1. Press  key, a window will be opened to enter received amount from customer

Receipt: 1

Cash:


Press [change] again

2. Enter repayment

3. Press  key

 
 





4.9.5. Print

This step is final step of preparing the receipt, after confirmed and

registered of receipt, press  key.

5. Usage of Menu

 5.1. Menu operation method

1. Press  key to enter the menu.
2. Press , ,  and  keys to choice the options.(The left side of the menu options can also last digit number corresponding number key shortcut to open the next level menu or execute the selected menu option)
3. Press  key to open the next level menu or execute the selected menu option.
4. Press  key to void the last level menu or void current operations.


5.2. PLUs

This device is able to register the information such as name, price& barcode of intended goods in 10,000 indirect PLUs and 70 separate direct PLUs.

5.2.1. Save the good's information in PLU

1. Press  key
2. Select "PLU" from menu

[OPERATING INSTRUCTIONS OF PCT]

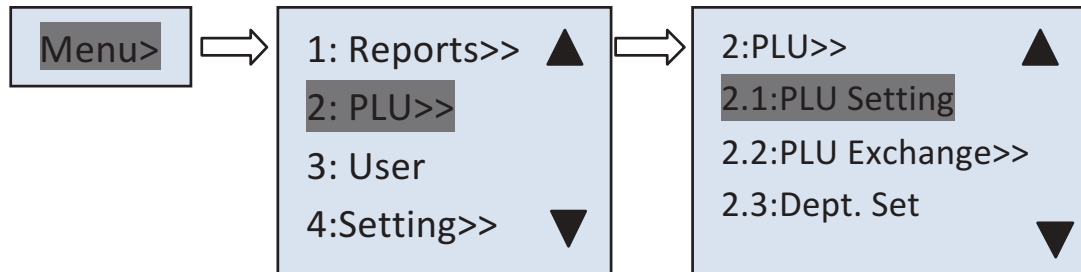

3. Select “PLU setting” item from PLU part

A window will be opened to enter number of memory

Please Input PLU Number:


Press register key

4. Enter number of intended memory

5. Press  key

If you want to save in indirect memories, enter intended Hot-Key instead of step2 and 3.

6. Enter goods information in opened page

PLU No: ** 

Name: ****

Unit Price: ****

Press [OK] to save


[OPERATING INSTRUCTIONS OF PCT]

7. Press  key

5.2.2. Department set

If the stores have more than one department, it is possible to organize your scale on your desired department.

1. Select “ department set “ from PLU window

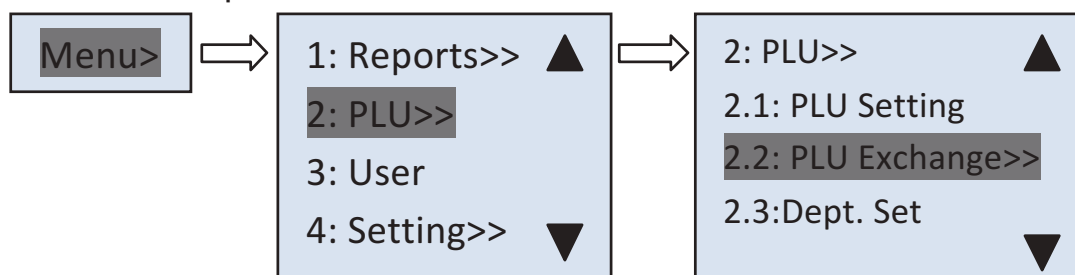

A window will be opened to enter name and number of desired department

2. Enter name and number of department

Dept. No:	99	123
Name:	****	
Press [ok] to save		


3. Press  key

5.2.3. Hot-keys setting

There are 70 direct PLUs that allow to user to register 70 goods of more selling goods in these 70 PLUs.

[OPERATING INSTRUCTIONS OF PCT]

1. Select "Hot-key" from PLU window

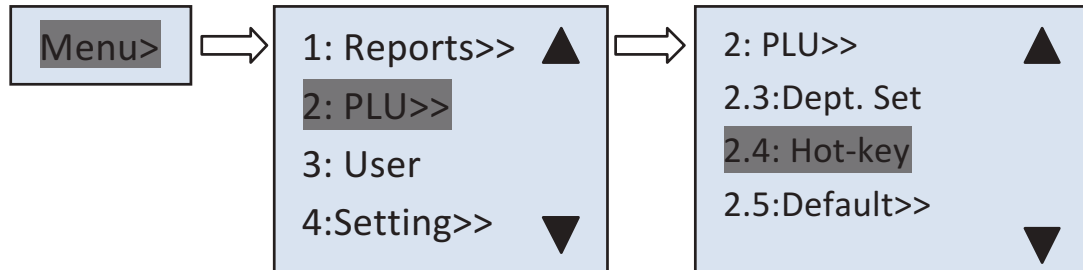


A window will be opened to enter number of PLU

PLU No:

Press register key

2. Enter number of PLU

3. Press  key

The related information to selected PLU is ready to register in Hot-keys and a window will be opened and show information of this PLU

4. Enter number of Hot-key

Unit Price: ****
Hot-key No: **


[OPERATING INSTRUCTIONS OF PCT]

In this case, information of desired goods will be registered in Hot-keys.

5.2.4. print content of direct PLUs

If you need to aware content of Hot-keys, you can print a complete list of saved information:

1. select "Reports" item from menu

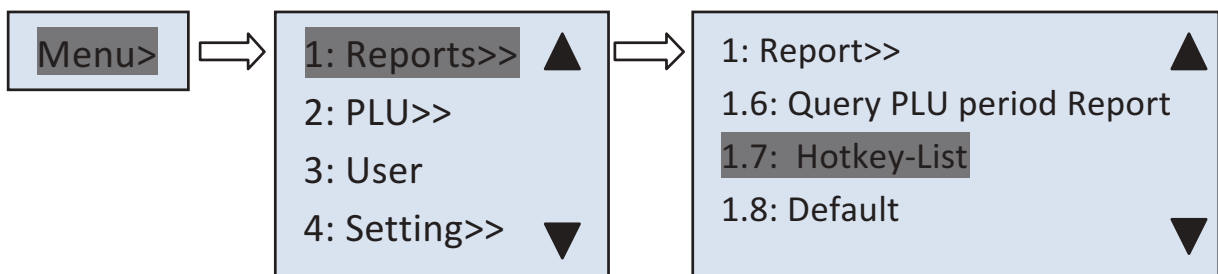

2. select "Hotkey-List"

It will print a list of all saved information in direct memories.

5.2.5. Default PLUs

If there is seasonal variation in sales, you can use default PLU
If you are going to register the information of seasonal goods in default PLUs, it

Should be done by Flippo agents

1. Delete previous reports
2. Select "default PLU" from memory window




[OPERATING INSTRUCTIONS OF PCT]

3. Select desired default.

5.2.6. Print content of default PLUs

If you need to aware content of default PLUs, you can print a complete list of saved information

1. select "reports" item from menu

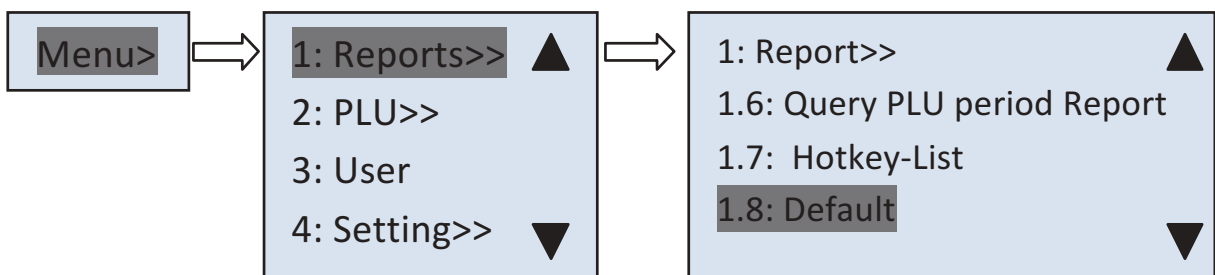


2. select "default "

It will print a list of all saved information in default PLUs.

5.3. Print setting


5.3.1. Title font size

1. Select "Setting" of menu window
2. Select "Message font size"

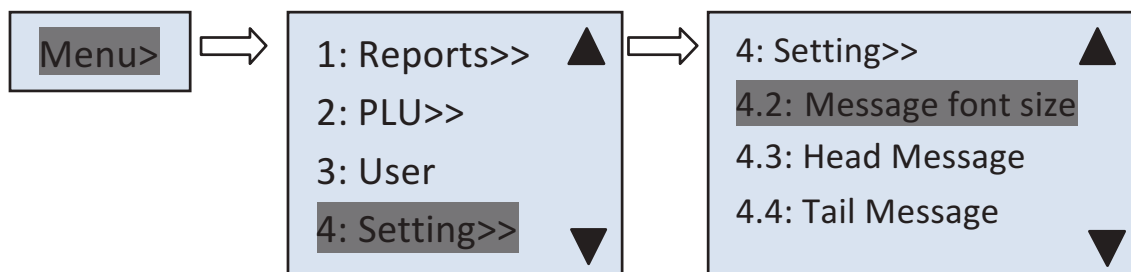

3. Select your desired size


[OPERATING INSTRUCTIONS OF PCT]

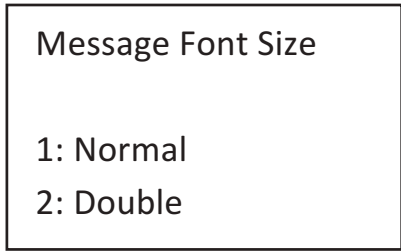

4. Press  key


5.3.2. Head and tail title

1. Select “ Setting” of menu window
2. Select “Head message” or “Tail message”

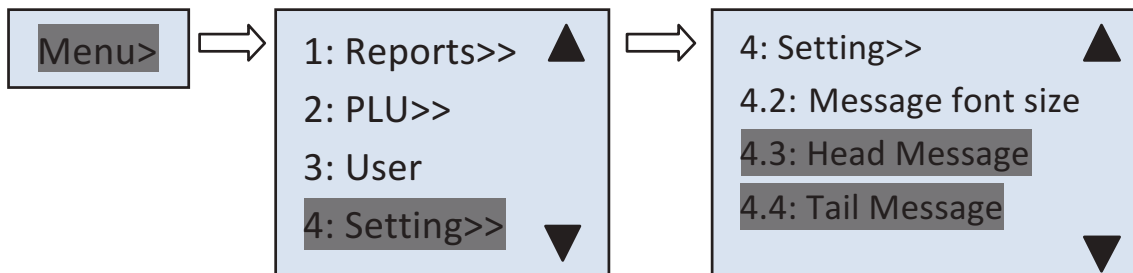


It is considered 4 lines for head message and 2 lines for tail message and can enter 19 character in each line

HEAD MESSAGE

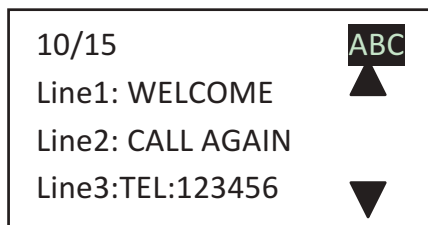


TAIL MESSAGE

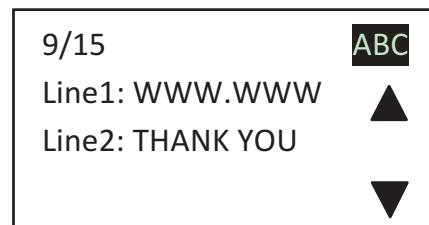

[OPERATING INSTRUCTIONS OF PCT]

5.3.3. Reprint number

1. Select "Setting" item of Menu
2. Select "Printer Set" item of Setting
3. Select "printing number"

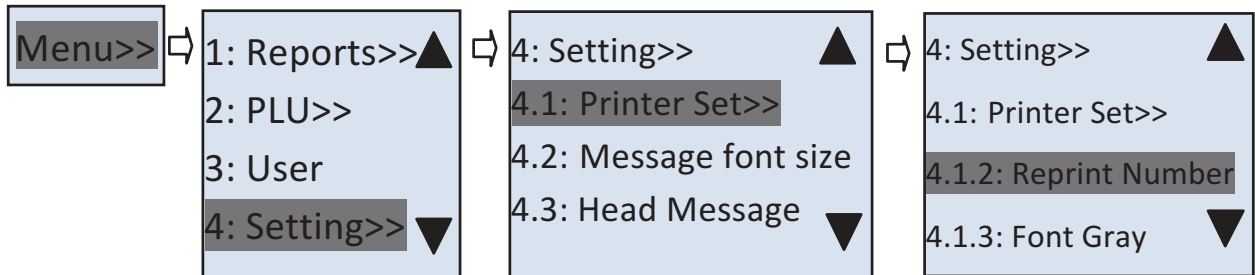

A window will be opened to enter printing number


Reprint Number (1-4)
1= print One receipt
2

4. Enter the Reprint number from 1 to 4

5. Press  key

5.3.4. Font gray scale

1. Select "Setting" item of Menu
2. Select "Printer set"
3. Select "font gray"

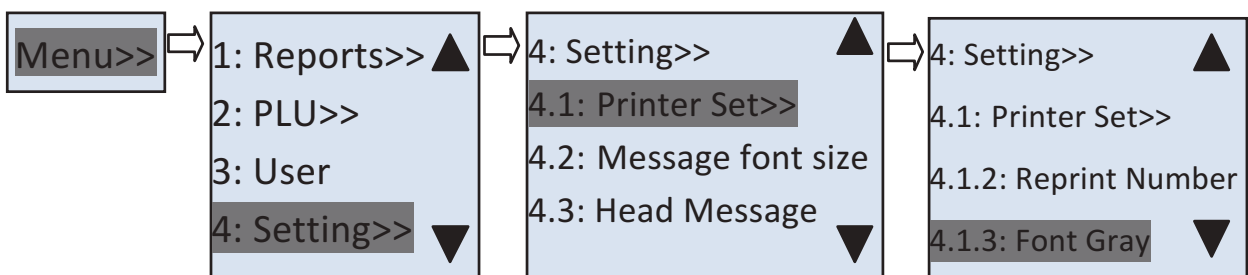

[OPERATING INSTRUCTIONS OF PCT]

A window will be opened to enter font gray

Font Gray(1~10)
Press [OK] to save
5


4. Input scale of font gray. (Can set font gray from 1 to 10)

5. Press  key

5.4. Other setting

5.4.1. Date and time


1. Select “ Setting “ item
2. Select “ date and time” item

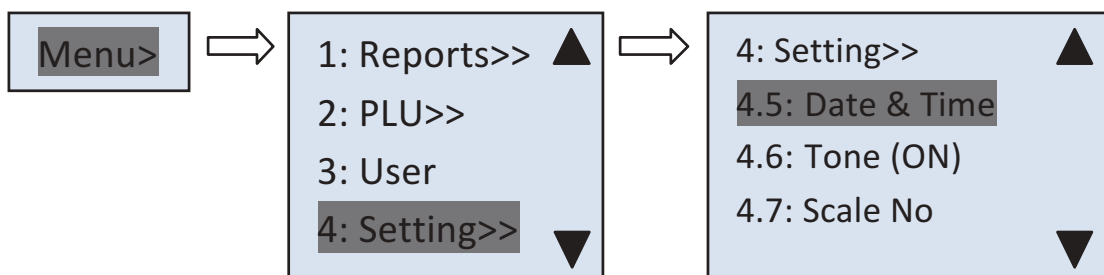

A window will be opened to set date and time

3. Enter date and time


[OPERATING INSTRUCTIONS OF PCT]

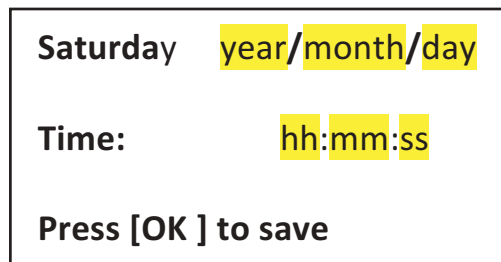

Noted that the possibility of pre-set time is not possible.


5.4.2. Beep sound

1. Select " Setting" item of Menu
2. Select " Tone"

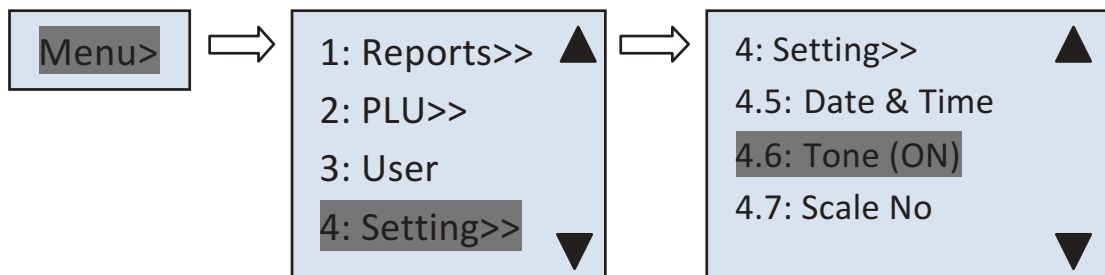

A window will be opened to off /on of this sound

4. Select "ON" or "OFF" item

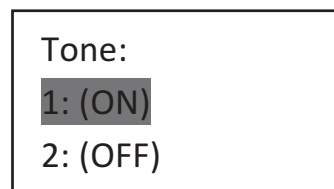


5. Press  key

[OPERATING INSTRUCTIONS OF PCT]

5.4.3. Device number

If a store has more than a scale, it is possible to put number on the scales


1. Select “ Setting “ item of Menu
2. Select “ Scale No”

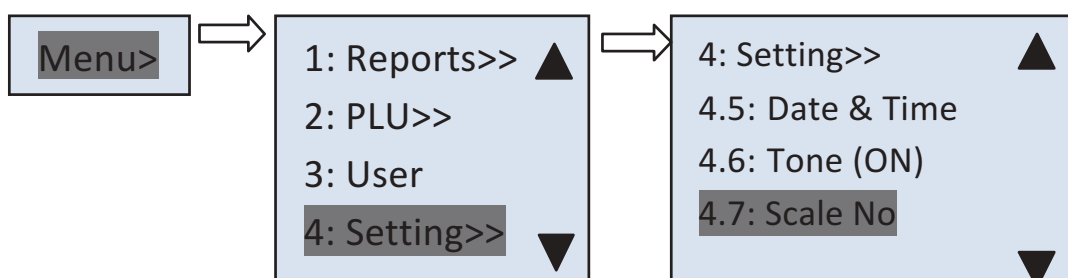

A window will be opened to enter device number

3. Enter device number

A rectangular window with a black border containing the text: 'Scale No', 'Press [OK] to save', and the number '99' which is highlighted in yellow.

4. Press  key


The scale can accept device numbers from 1 to 99 devices

5.4.4. Supporting one to three customers at the same time

1. Select “ Setting “ item
2. Select “ Printer Setting “item

[OPERATING INSTRUCTIONS OF PCT]

3. Select "Customer" item

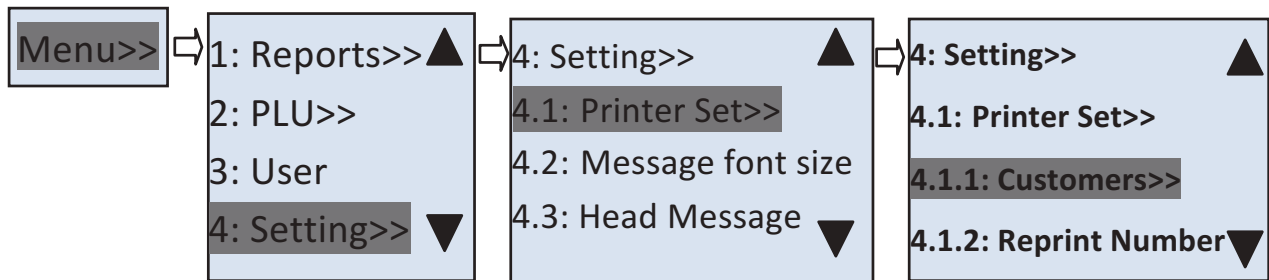


Then, a window will be opened to select one or three customers

4. Select "three customers" and or " one customer"


5. Press  key

5.4.5. Currency

1. Select " setting" item
2. Select " printer statue"
3. Select " currency"

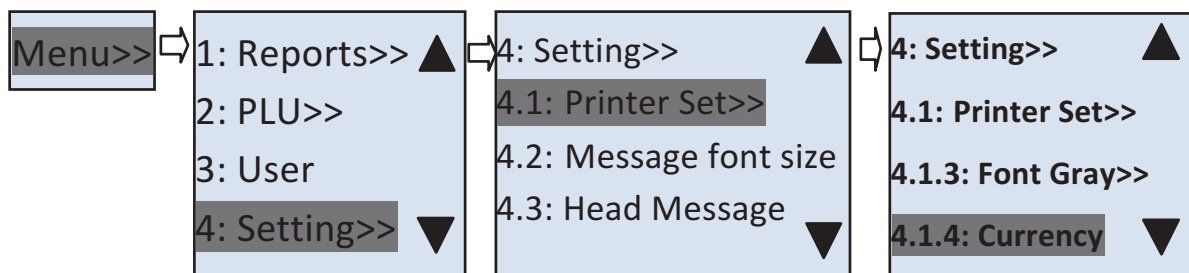

4. Then, select "Euro" or "USD"

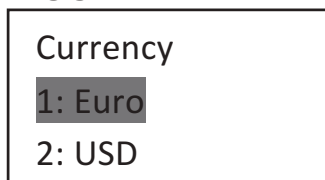


5. Press  key

5.5. The reports

5.5.1. Daily Report


1. Select “ Reports” item of menu
2. Select “ Daily report” item

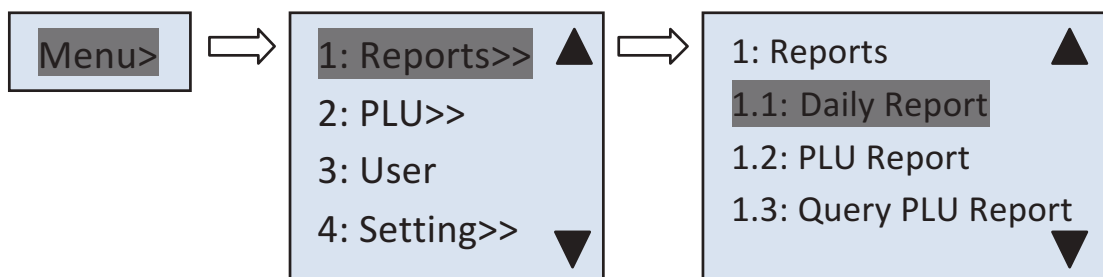

The scale will prepare and print a total sale report

5.5.2. PLU report

1. Select “ Reports” of Menu
2. Select “ PLU Report”

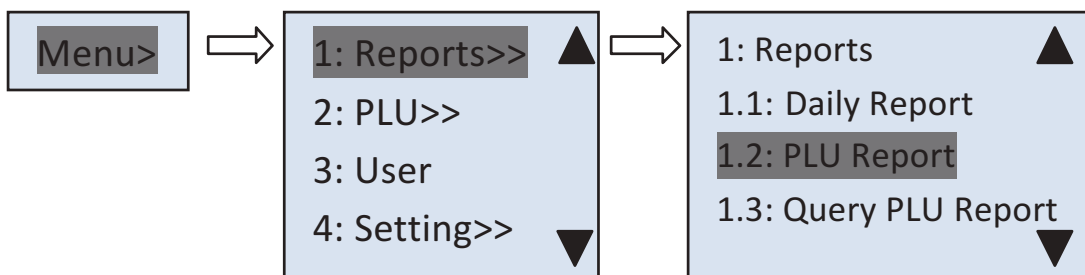


If you select this item, the scale will prepare and print a PLU Report

5.5.3. Query PLU Report

1. Select “Reports” item of Menu

[OPERATING INSTRUCTIONS OF PCT]

2. Select "Query PLU report"

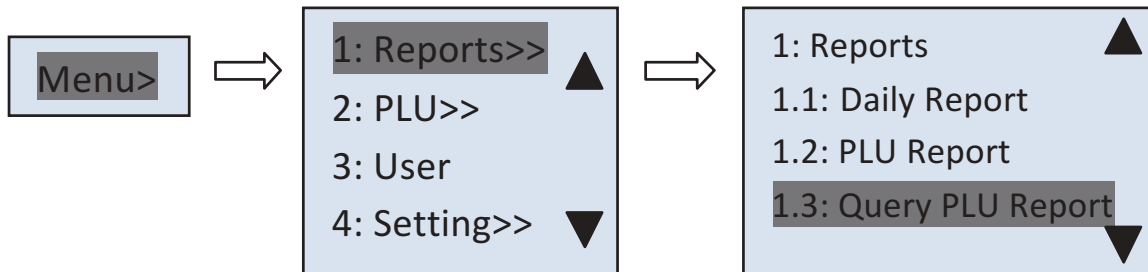

A window will be opened to enter number of desired PLU

Input PLU number and
Press [OK] key:

**

3. Enter number of desired PLU

4. Press  key


The display will show the information of quantity sale in LCD, total weight sold in weight window and total price in total price window.

[OPERATING INSTRUCTIONS OF PCT]



5.5.4. Period Report

1. Select "Reports" item of Menu
2. Select "Period Report" item

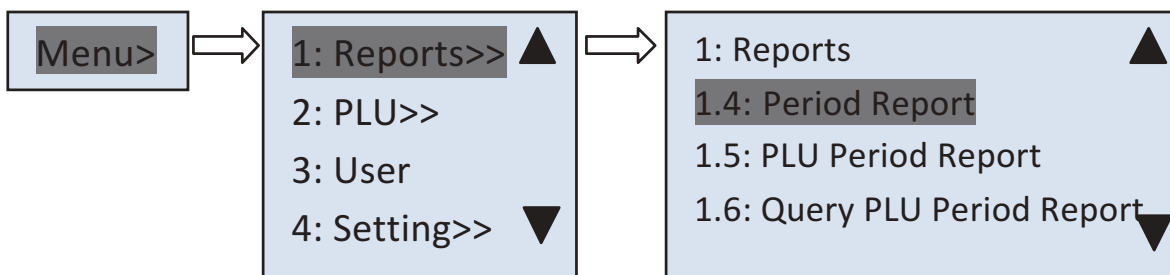


A window will be opened to enter your desired date

Start date: yy/mm/dd

End date: yy/mm/dd

Press [Print] Key


3. Enter the date

4. Press  key

[OPERATING INSTRUCTIONS OF PCT]

5.5.5 PLU Period Report

1. Select “ the Reports” item
2. Select “ PLU Period Report”

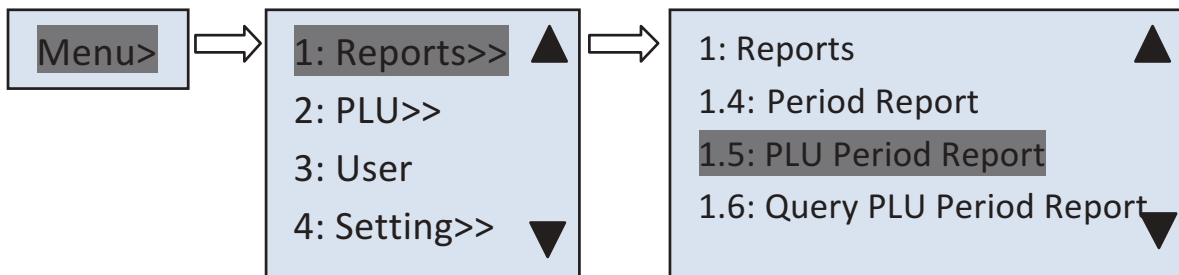

A window will be opened to Enter desired date

Start date: yy/mm/dd

End date: yy/mm/dd

Press [Print] Key


3. Enter the date

4. Press  key

[OPERATING INSTRUCTIONS OF PCT]

5.5.6 Query PLU Period Report

1. Select “the Reports” item
2. Select “ Query PLU Period Report”

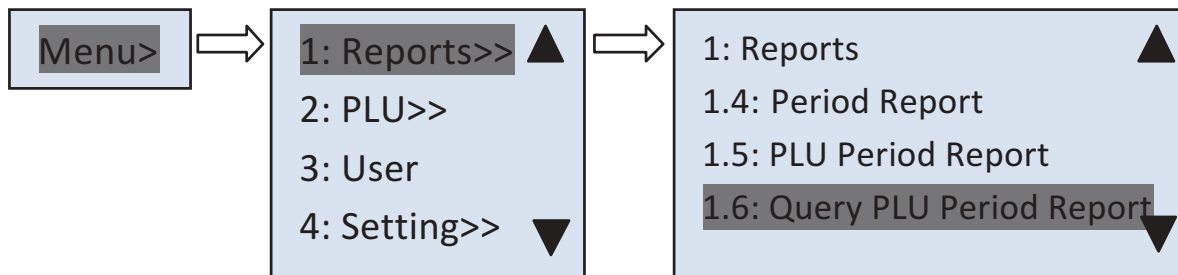

A window will be opened to enter number of desired PLU and date too.

Start date: yy/mm/dd
End date: yy/mm/dd
PLU No: **
Press [Print] Key

3. Enter desired PLU and date

4. Press  key


The display will show the information of quantity sale in LCD, total weight sold in weight window and total price in total price window

[OPERATING INSTRUCTIONS OF PCT]



5.5.7 Clear- out the reports

1. Select “ the Reports” of Menu
2. Select “ Clear-out the reports”

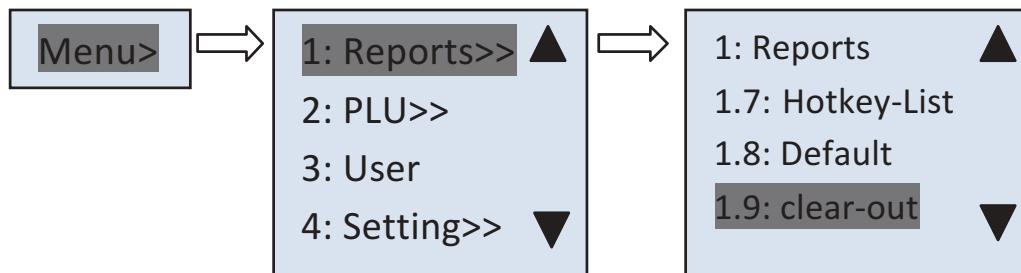

A window will be opened to get a confirmation

3. Select confirm or cancel


4. Press  key

[OPERATING INSTROCTIONS OF PCT]


5.6. User set

To control on some parts, it is possible to define the user

1. Select "User" item of Menu

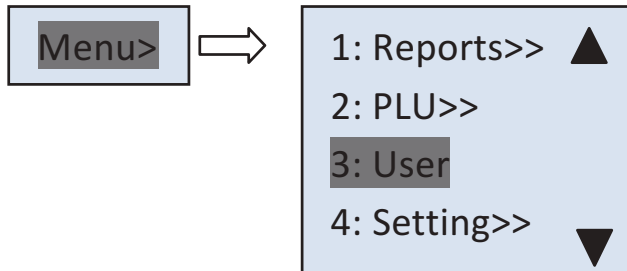


A window will be opened to enter user name, if no user has defined, a window will be opened as below picture:

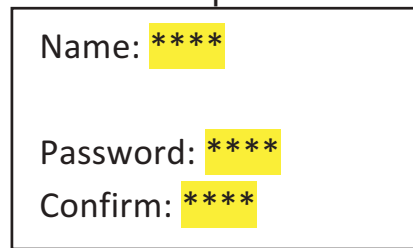

The screenshot shows a form with three input fields. The first field is labeled "Name:" and contains four asterisks. The second field is labeled "Password:" and contains four asterisks. The third field is labeled "Confirm:" and contains four asterisks.

If user name has defined before, a window like below picture will be opened:

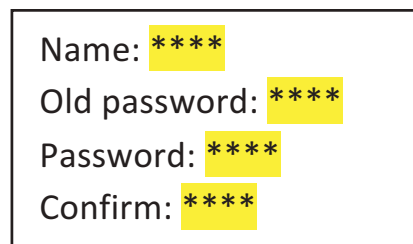

The screenshot shows a form with four input fields. The first field is labeled "Name:" and contains four asterisks. The second field is labeled "Old password:" and contains four asterisks. The third field is labeled "Password:" and contains four asterisks. The fourth field is labeled "Confirm:" and contains four asterisks.

Enter username and password

2. Press  key

[OPERATING INSTRUCTIONS OF PCT]

6. Errors and Alarms

Error No	Message	Reason
1	Input Value is Invalid	Scale No (n), n = NULL or n = 0 Printer Gray(n), n = NULL or n = 0 or n > 10
2	PLU Barcode Invalid	PLU Barcode = NULL.
3	PLU NO. Invalid	PLU No is not a integer or PLU No = 0
4	No Paper	install paper in printer
5	PLU not Found	When Editing or Selling PLU, PLU can't be found with the PLU No or Hotkey
6	IP Address Invalid	input IP Address is invalid
7	Date is Invalid	
8	Password Inconsistent	Password and Confirm password is different.
9	Wrong Password	Password is not right
10	Quantity Invalid	quantity's decimal digits > 3
11	Price Invalid	Price's decimal digits > 2
12	Memory Full	Memory for PLU data is full and input 10,000 PLU. Can't add any new PLU
13	Receipt Paid	After customer paid for the receipt, can't do discount operation again
14	PLU Data Memory Error	PLU Data Memory error. Should Erase all PLU data or Download PLU again
15	Can't Sell over 50 Items	For one receipt. Max item number is 50.If more than 50 items, should print that at second receipt
16	Department No. Invalid	Department No(n). n = 0 or n > 99
17	Barcode is Repeated	When editing standard barcode, the

[OPERATING INSTRUCTIONS OF PCT]

		barcode you input is using by another PLU
18	PLU No is repeated	When editing PLU, more than one PLU has same PLU No. It may cause by downloading PLU form PC software
19	Physical Address Invalid	Network's hardware address is invalid. For example, 00 00 00 00
20	Digit Overflow	Quantity of decimal digits(unit price and total price) more than 3
21	Result Overflow	Calculator result is overflow
22	Divisor can't be 0	Calculation such as 0/0, 1/0 is forbid
23	Over Max Weight	Current weight is more than max weight, should remove something form pan to avoid damaging the scale's load cell
24	Can't Re-Zero	put load on pan when power on system with On/Off switch
25	Nothing on the Pan	Press [accumulation] key before putting load on pan
26	Haven't Accumulated	Should add current item before use [Up] or [Down] key to query other items
27	Haven't Calibrate	Can't sell PLU before calibrating.
28	PLU not Exist	When editing standard barcode, the PLU No. you input is not existed
29	Report not found	Have not record of report you are querying
30	Quantity over Max Value	Quantity is more than 99999
31	Total Amount over Max Value	Total Amount is more than 9999999
32	Pay lower then total	For example : total =23.67 pay money=21.00
33	Discount more than	When discount amount is more than








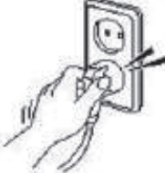

[OPERATING INSTRUCTIONS OF PCT]

	Total Amount	receipt amount.
34	Can't Change Date Back	Input date lower than today.
35	Time is Invalid	
36	U-Disk Writing Failed	Cannot save data on U-disk.
37	U-Disk Reading Failed	Cannot read data from U-disk.
38	U-Disk Space is full	Clean data of U-disk and do your operation again
39	U-Disk not found	Check connection of U-disk
40	U-Disk writing and reading failed	try again last operation of U-disk
41	U-Disk Unrecognized	
42	File not Found	Can't find file in the U-Disk

[OPERATING INSTRUCTIONS OF PCT]








Precautions

Precaution when installing the scale. To ensure that you get the most from your scale, please follow these instructions.

Attention!		
<p>Scale must be grounded to minimize electricity static. This will be minimizing electric shock.</p> 	<p>Do not overload beyond the maximum weight limit.</p> 	<p>Do not disassemble the scale. When any damage or defect occurs contact your authorized dealer immediately for proper repair.</p> 
<p>To reduce electric shock or incorrect reading, do not spill water on the scale or place in the humid condition.</p> 	<p>To prevent from fire occurring, do not place or use scale near flammable or corrosive gas.</p> 	<p>Do not pull the plug by its cord when unplugging. Damaged cord cause electric shock or fire.</p> 
<p>Use proper Adapter. Incorrect adapter could damage the scale.</p> 	<p>Insert plug firmly to wall outlet to prevent electric shock.</p> 	<p>Avoid placing scale near heater or in direct sunlight.</p> 

[OPERATING INSTRUCTIONS OF PCT]

Make sure to plug your scale into the proper outlet. For maximum Performance, plug into a power outlet 30 minutes before the usage for warm up.

Attention!		
<p>Grab on the bottom of the scale when moving. Do not hold by the platter.</p> 	<p>Avoid sudden shock to the scale. Internal mechanism could be damaged.</p> 	<p>For consistent or accurate reading maintain periodical check by your authorized dealer.</p> 
<p>By adjusting 4 comers of the scale, set the scale even using the built in scale leveling indicator.</p> 	<p>Place the scale on firm and temperature consistent environment.</p> 	<p>Take the battery out when scale is not in use for long time. Leakage from the batteries is hazardous.</p> 
<p>Keep the scale away from the other electromagnet generating devices. This may interface with accurate reading.</p> 		

* This equipment is indoor use and all the communication wirings are limited to inside of the building.

[OPERATING INSTRUCTIONS OF PCT]

Appendix one: Menus list and functions outlined

Menu option	Function description
1: Report	
1.1: Sale	
1.1.1: Daily Report	Print the daily sales statistical report
1.1.2: PLU Report	Print the PLU daily sales statistical report
1.1.3: Query PLU Report	Query the goods sales situation according to the PLU No.
1.1.4: Period Report	Print the selected period sales statistical report
1.1.5: PLU Period Report	Print the selected period PLU sales statistical report
1.1.6: Query PLU Period Report	Query the goods selected period sales situation according to the PLU No.
1.2: Purchase	
1.2.1: PLU Report	Print the PLU daily purchase statistical report
1.2.2: PLU Period Report	Print the selected period PLU purchase statistical report
1.3: Refund	
1.3.1: PLU Report	Print the PLU daily refund statistical report
1.3.2: PLU Period Report	Print the selected period PLU return statistical report
1.4: X Report	
1.4.1: X Financial Report	Print the financial statistical report
1.4.2: Period Report	Print the period statistical report
1.4.3: X Refund Report	Print the refund statistical report
1.4.4: X Clerk Report	Print the clerk sales statistical report
1.4.5: Department	Print the department sales statistical report
1.4.6: Customer Report	Print the one of customers sales statistical report
1.5: Z Report	
1.5.1: Z Financial Report	Print the financial statistical report, and clear out the report data
1.5.2: Z History Report	Print the historyl statistical report
1.5.3: Z Gross Profit Report	Print the gross profit statistical report, and clear out the report data
1.5.4: Z PLU Report	
1.5.4.1: Z Sale Report	Print the sale statistical report, and clear out the report data
1.5.4.2: Z Refund Report	Print the refund statistical report, and clear out the report data
1.5.4.2: Z Purchase Report	Print the purchase statistical report, and clear out the report data
1.5.5: Z Clerk Report	Print the clerk sales statistical report, and clear out the report data
1.6: Stock	
1.6.1: PLU Stock	Print the PLU stock summary report
1.6.2: PLU Stock Warning	Print goods message when this goods'actual stock

[OPERATING INSTRUCTIONS OF PCT]

	quantity shorter than the warning stock quantity
1.7: Other Report	
1.7.1: Journal Account Report	Input the start and end journal account No. for print the journal account report
1.7.2: Default Name	Print the prestored default name (1/2) setting list.
1.7.3: Hotkey List	Print the current hotkey setting list.
1.8 Transfer Reports	
1.8.1: Import Reports	Import the reports from other memorizer (such as U-disk) to cash register by USB port.
1.8.2: Export Reports	Export the reports from cash register to other memorizer (such as U-disk) by USB port.
1.9: Clear-out	Clear-out all report data
2: PLU	
2.1: PLU setting	
2.1.1: Define and Edit	Define or edit PLU
2.1.2: Search	
2.1.2.1:Search	Set whether searching.
2.1.2.2:Re-sort PLU List	Set whether re-sort PLU list.
2.1.3: PLU Stock	
2.1.3.1: Add Stock	Add stock by PLU No.or valid barcode number
2.1.3.2: Reduce Stock	Reduce stock by PLU No.or valid barcode number
2.1.3.3: Search Stock	Search stock by PLU No.or valid barcode number
2.1.3.4: Check Stock	Revise stock by PLU No.or valid barcode number
2.1.4: Change Price	Change goods sales price by PLU No.or valid barcode number.
2.1.5: Delete	Delete the corresponding goods information by PLU No.or valid barcode number.
2.1.6: Delete ALL	Delete all of PLU goods information.
2.2: PLU Transfer	
2.2.1: Import PLU	Import the PLU inofrmation from other memorizer (such as U-disk) to cash register by USB port.
2.2.2: ExportPLU	Export the PLU information from cash register to other memorizer (such as U-disk) by USB port.
2.3: Department	Set department information
2.4: Tax Setting	
2.4.1: Start Tax Mode	Set whether start tax mode
2.4.2: Tax Rate Mode	Set the unit price whether include the tax mode
2.4.3: Tax Categories (1~10)	
2.5: Hotkey	Set hotkey corresponding PLU.
2.6: Default Name	
2.6.1: Default Name1	Use prestored default name 1 to in stead of the current

[OPERATING INSTRUCTIONS OF PCT]

	hotkey PLU.
2.6.2: Default Name2	Use prestored default name 2 to in stead of the current hotkey PLU.
3: User	
3.1: User	
3.1.1: Define and Edit	Define or edit user information, password, permission
3.1.2: Change Password	Change user login password
3.1.3: Delete	Delete any user
3.1.4: Clerk Operations	
3.1.4.1: Whether print the receipt after checking out	Set whether print the receipt after checking out
3.1.4.2: Manual change price	Set the clerk whether can manual change the price when checking out.
3.1.4.3: Manual sell	Set the clerk whether can input the unit price for directly sale.
3.1.4.4: Allow negative stock	Set whether allow negative stock.
3.1.4.5: Log off after finishing the sales	Set whether log off after finishing the sales
3.2: Customer	
3.2.1: Define and Edit	Define or edit customer information
3.2.2: Change the credit line	Change the customer credit line
3.2.3: Delete	Set whether delete the customer information
4: Date Managment	
4.1: Print Receipt	
4.1.1: Customer	
4.1.1.1: Three Customer	Open the three customers same time service mode
4.1.1.2: One Customer	Open the one customers service mode
4.1.2: Printing Gray	Set receipt printing gray level
4.2: Standby information	Input the ECR standby information
4.3: Receipt Setting	
4.3.1: Font Size	Set receipt title font printing size
4.3.2: Print Logo	Set receipt whether print head / tail logo
4.3.3: Print Message	Set receipt whether print head / tail message
4.3.4: Print Receipt	Set whether printer the receipt and report
4.3.5: Print Receipt Items	Set receipt printing content (serial number、tax amount、total discount amount、PLUdiscount amount、total premium amount、PLU premium amount、units、total weight、currency symbol、PLUbarcode)
4.3.6: Press the [Cash] key for re-printing	Set press [Cash] key whether re-print last time checking out receipt
4.3.7: Reprint Number	Set reprint receipt number after checking out

[OPERATING INSTRUCTIONS OF PCT]

4.4: Head Message	Set printing receipt head message
4.5: Tail Message	Set printing receipt tail message
4.6: System Setting	
4.6.1: External equipments	
4.6.1.1: Serial Port Setting	Set serial port connecting equipments (external customer display、external printer、external communication[such as PC])
4.6.2: Date & Time setting	Set ECR date and time
4.6.3: Machine No.	Set ECR number (machine number)
4.6.4: Network Setting	
4.6.4.1: Network Setting	Set network data (gateway, server and native machine IP address)
4.6.5: Tone	Set whether tone prompt function.
4.6.6: Automatic Accumulate to sales items	On or off the automatic accumulate to sales items function
4.6.7: Language	Set the display language
4.6.8: Restore Settings	
4.6.8.1: Restore Factory Settings	Restore the machine data to factory Settings
4.6.8.2: Default System Setting	Restore the machine data to default situation
4.6.9: Daily report record time	Set, save and reset the daily report time (default 24 time)
4.7: Discounts and Premium	
4.7.1: Manual Discount	
4.7.1.1: PLU Manual Discount	On or off PLU manual discount function
4.7.1.2: Subtotal Discount	On or off Subtotal discount function
4.7.2: Manual Premium	
4.7.2.1: PLU Manual Premium	On or off PLU manual premium function
4.7.2.2: Subtotal Premium	On or off subtotal premium function
4.8: Copy fault machine data	
4.8.1: By serial port	Copy fault machine data by serial port
4.8.2: By TCP/IP port	Copy fault machine data by TCP/IP port
5: Barcode	
5.1: Print Barcode	Call out the barcode by unit price, quantity, amount etc. data.
5.2: HRI	Open the barcode font printing function.
5.3: Line Barcode	Open sales barcode information creating and printing function
6: User Log Off	Log off
7: Version Information	Show ECR version information
8: Power Off	Power off ECR

Value Each Gram



v.201811
User Manual
PCT