






AXLE SCALE AXC


User Manual



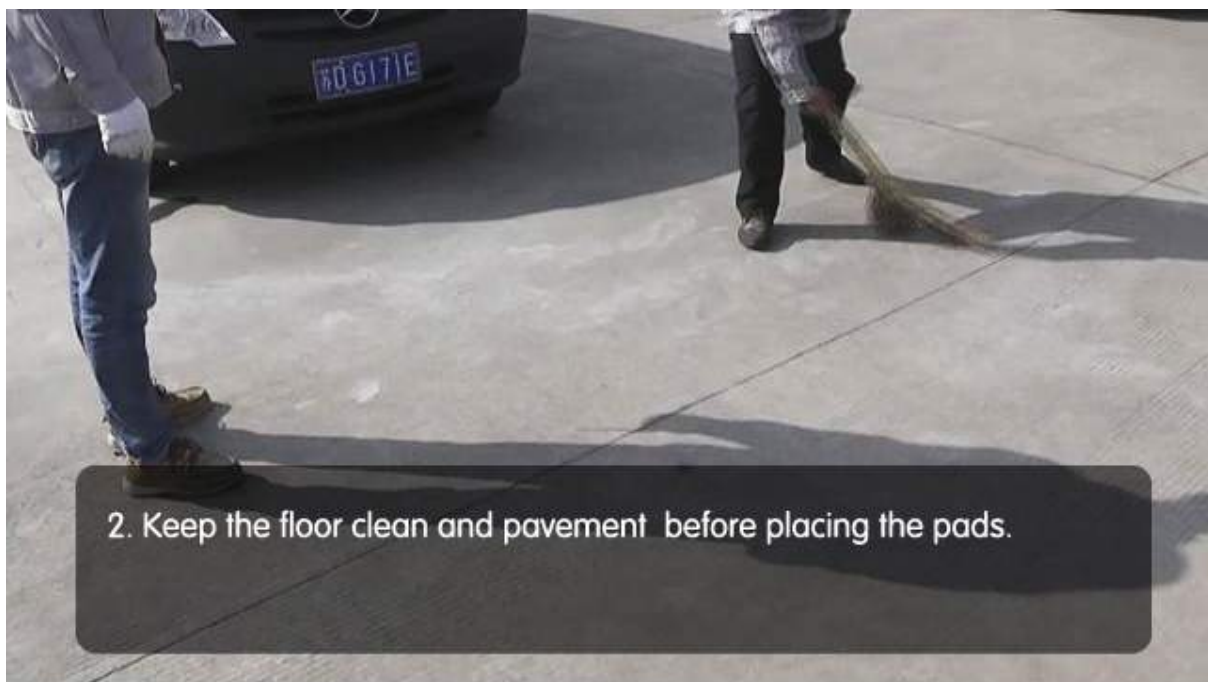


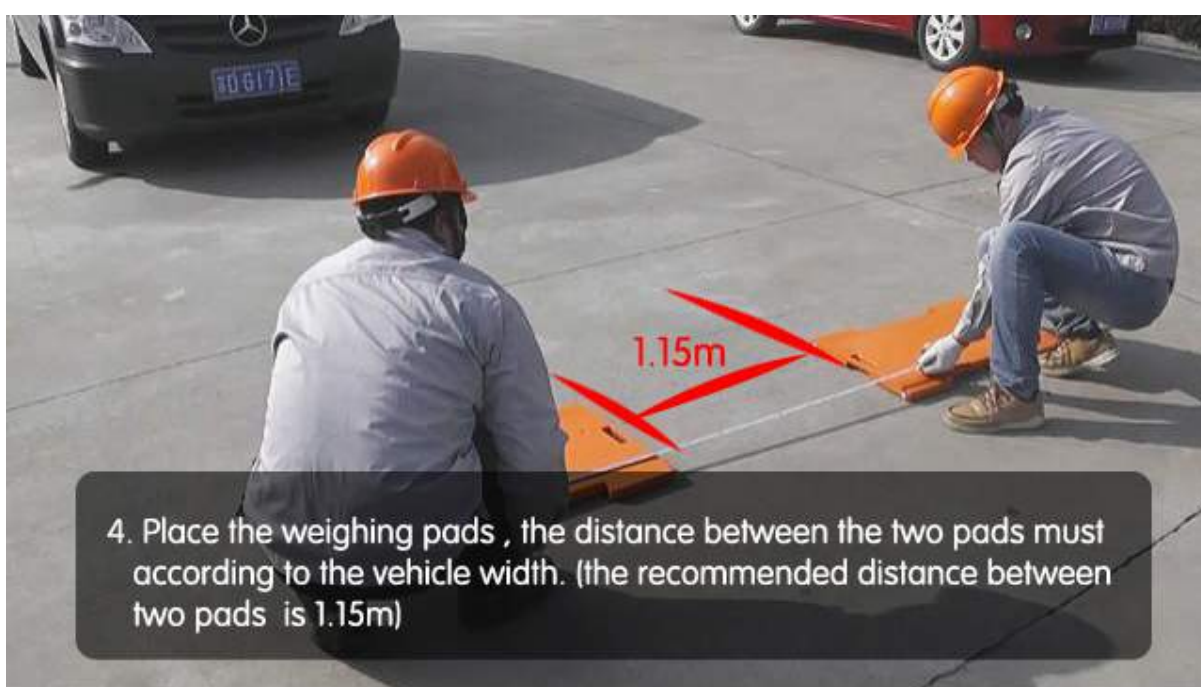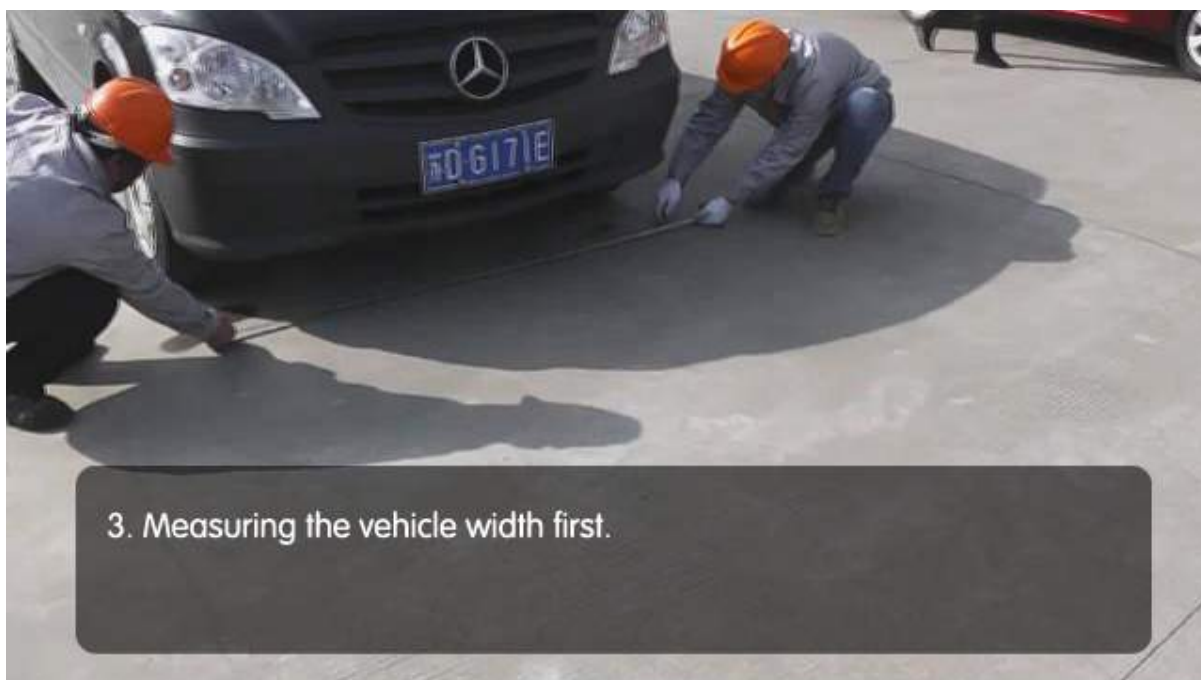



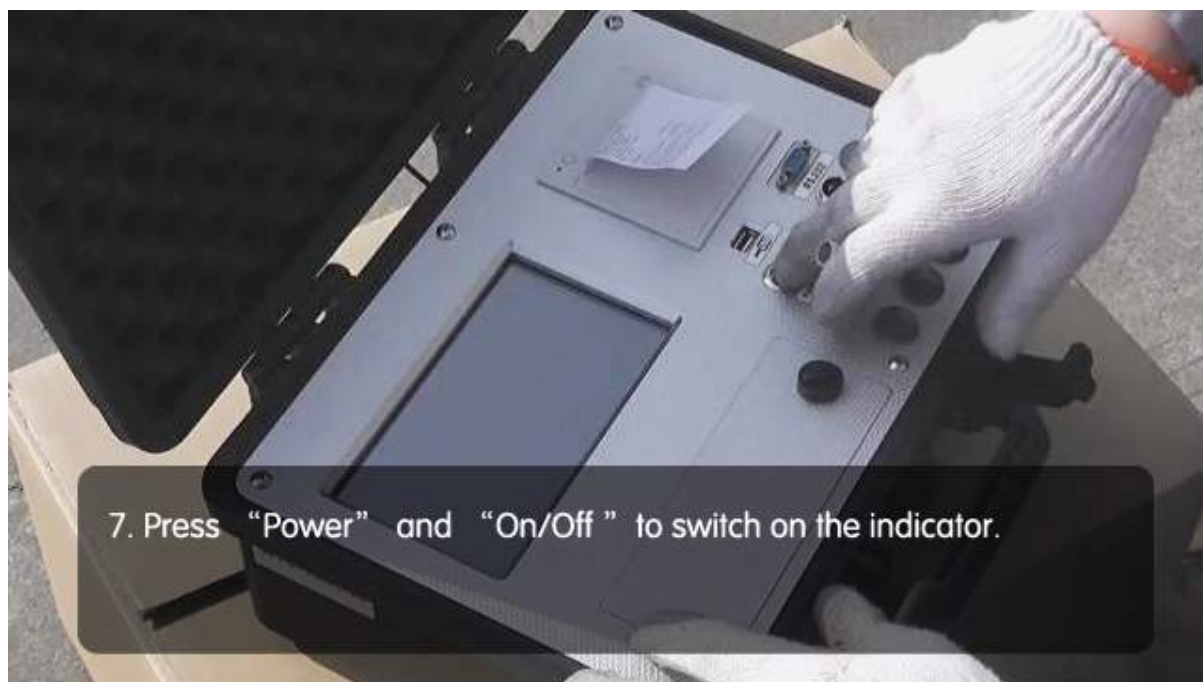



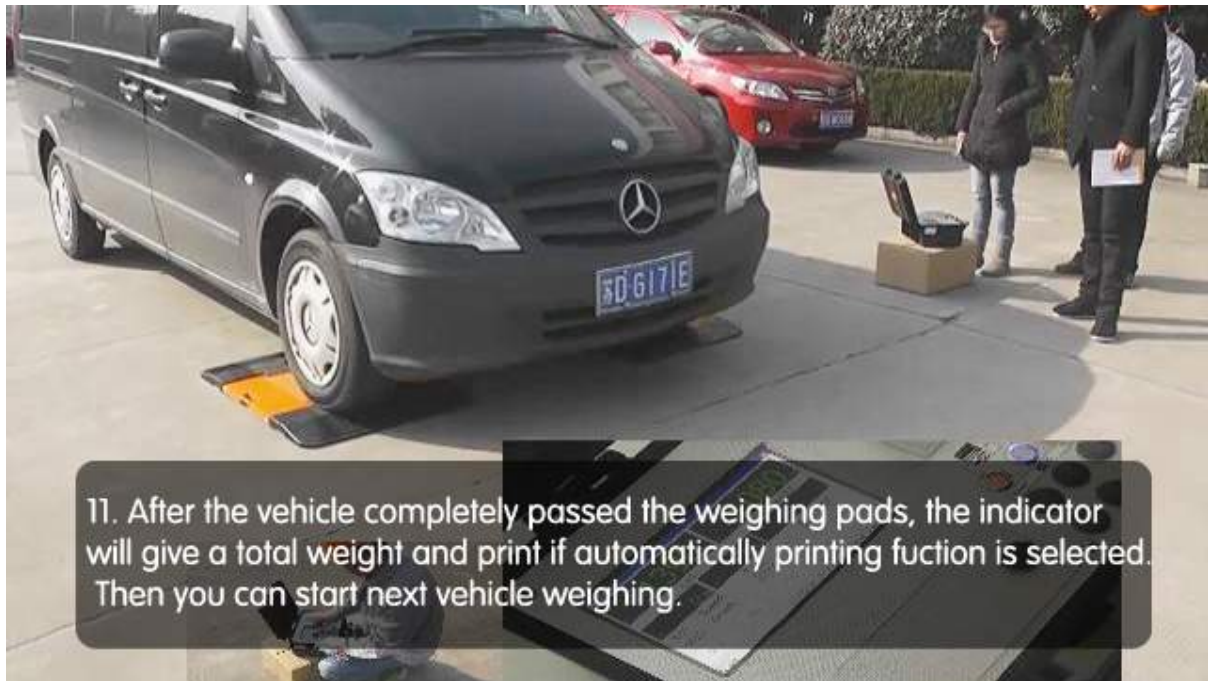

11. After the vehicle completely passed the weighing pads, the indicator will give a total weight and print if automatically printing function is selected. Then you can start next vehicle weighing.

