



Dcable

User Manual


v.201811

Value Each Gram


Dcable User Manual

1. Connect the DB9 connector with scale, indicator or other devices with RS232 protocol.
2. Configure the parameters of serial output correctly (for continuous or command output).
3. Connect the USB to the USB port of computer
4. Run the software which you want to receive the data from the serial output

Example of Word:

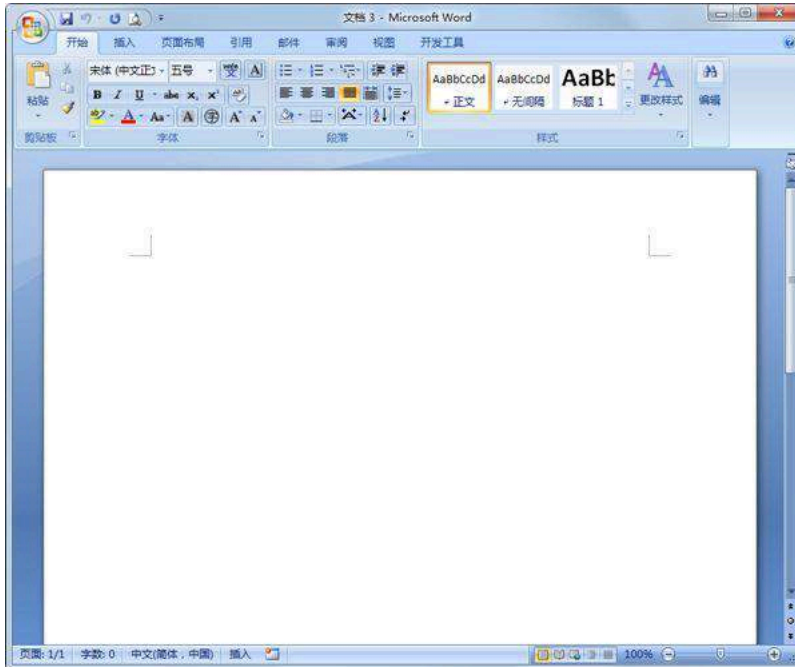

Put the mouse arrow on the Word, it will start to display the data automatically:

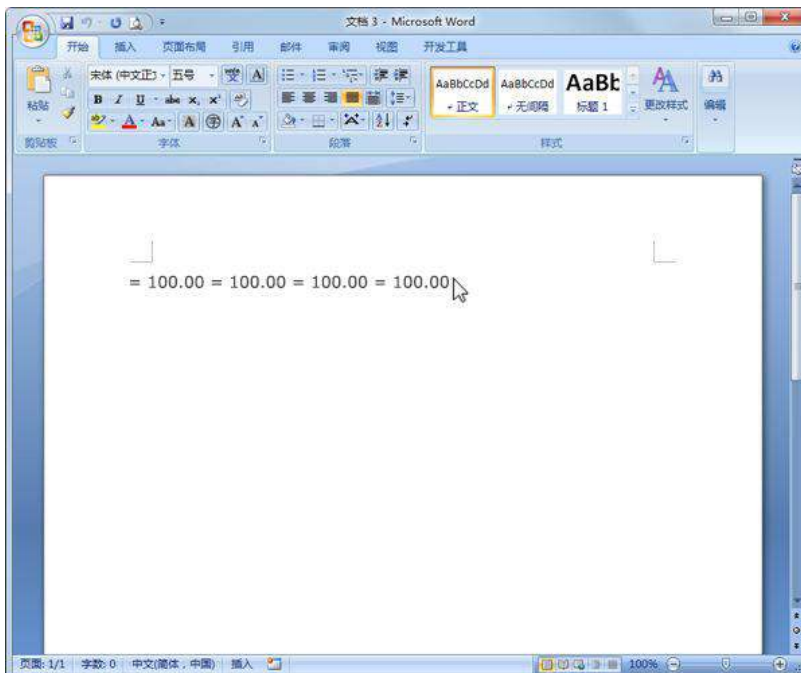

It will work the same for Excel, Chatting window or any other software which can display the data with the mouse arrow moving.



v.201811

User Manual Dcable



Weighing system & solution

An ISO9001 registered company
@No.335 Haishen, Xingxin Road, Huinan Town, Pudong District, Shanghai 201301, China
www.hiweigh.com All rights reserved, specifications subject to change without notice