

# X1S EN

INDICATOR

VALUE EACH GRAM  
**HiWEIGH**

V2.2  
22/06/2021










## **INDEX**

1.INTRODUCTION .....	1
2. KEYBOARD FUNCTIONS .....	1
3. SYMBOLS OF THE SCREEN .....	1
4.TECHNICAL DESCRIPTION .....	2
4.1 Connection of the load cells to indicator .....	2
4.1.1 “7 pin plug”	
4.1.2 “5 pin plug”	
4.2 RS-232 D-B 9	
4.3 Continuous ASCII RS-232 data output format .....	2
4.3.1 Address: Adr=99	
4.3.2 Address: Adr=00	
4.3.3 Address: Adr=1—98 manual and automatic printing output	
5.POWER .....	2
6.CONFIGURATION .....	3
7.CALIBRATION .....	4
8.ZERO .....	4
9.TARE .....	4
10.MANUAL WEIGHT ACCUMULATION .....	4
11.AUTOMATIC MEMORY ACCUMULATION .....	4
12.CLEAR MEMORY .....	6
13.HOW TO SET DATUM .....	6
14.BATTERY CAPACITY .....	6
15.UNIT OF WEIGHING (kg and lb) .....	6
16.CONNECTION TO MINI-PRINTERS .....	6
17.HIGH RESOLUTION DISPLAY MODE .....	6
18.PRECAUTION .....	7



## **1. INTRODUCTION**

- A/D resolution: 100.000
- A/D sampling speed: 40 times / second.
- Excitation voltage: 5 V dc; up to 4 load cells 350  $\Omega$  , 8 load cells 700  $\Omega$ .
- 6-bit display: 20 mm LED.
- Selectable display resolution:  
1 / 2 / 5 / 0,1 / 0,2 / 0,5 / 0,01 / 0,02 / 0,05 / 0,001 / 0,002 / 0,005 / ...
- Serial RS-232 interface. Optional RS-485 interface.
- Rate continuous ASCII data output: 1200 / 2400 / 4800 / 9600 Baud.
- External power supply: 100V – 240V AC.
- Internal rechargeable battery 6V dc.
- Operating temperature: de 0°C up to 40°C.
- Storage temperature: de -25°C up to 55°C.
- Relative humidity:  $\leq$  85 % non-condensing.
- Approximate weight: 2 kg.

## **2. KEYBOARD FUNCTIONS**

-  Off function.
-  On function.
-  Function selection during normal operation and configuration.
-  Manual accumulation function.
-  Move the flashing digit to the right during configuration or setting preset tare.
-  Increase the flashing digit during configuration or setting preset tare.
-  Zero the display, set the zero point or enter a tare value.


## **3. SYMBOLS OF THE SCREEN**

- [ **AC** ] Main power is applied to the indicator.
- [ **Tare** ] A weight has been tare, display is showing the net weight.
- [  ] Battery capacity less than 30 %.
- [ **Zero** ] The scale is Zero.
- [ **AUTO** ] The automatic accumulation function is active.
- [  ] The weight is stable.
- [ **lb** ] The unit of weighing is lb.

## 4. TECHNICAL DESCRIPTION


### 4.1 Connection of the load cells to indicator.

#### 4.1.1 "7 pin plug"

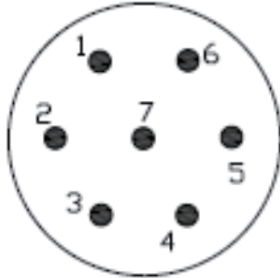

INDICATOR	LOAD CELL
+E(1,2) -----	+Excitation
-E(5,6) -----	-Excitation
+S(3) -----	+Signal
-S(4) -----	-Signal
GND(7) -----	(GND) shield

#### 4.1.2 "5 pin plug"

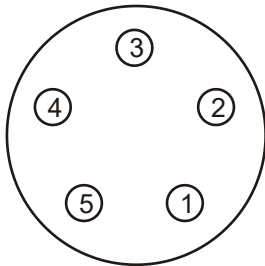

INDICATOR	LOAD CELL
+E (1) -----	+Excitation
-E (4) -----	-Excitation
+S (2) -----	+Signal
-S (3) -----	-Signal
GND (5) -----	(GND) shield

### 4.2 RS-232 D-B 9

Pin 3: TXT Output

Pin 5: GND

### 4.3 Continuous ASCII RS-232 data output format

#### 4.3.1 Address: Adr=99

The ASCII data format is "=, X1, X2, X3, X4, X5, X6"

<stx> =, X1, X2, X3, X4, X5, X6

X1, X2, X3, X4, X5, X6 are weight data.

#### 4.3.2 Address: Adr=00

The ASCII data format is "=. X6, X5, X4, X3, X2, X1"

<stx>=, X6, X5, X4, X3, X2, X1


X6, X5, X4, X3, X2, X1 are weight data.


If Address: Adr=99, If the weight is  kg, the continuous output is "=100.00"

If Address: Adr=00, If the weight is  kg, the continuous output is "=00.001"

#### 4.3.3 Address: Adr=1—98 manual and automatic printing output

## 5. POWER

In power off states, press  key turn on the indicator. The indicator will check the LED and display battery capacity  for 1.5 seconds.

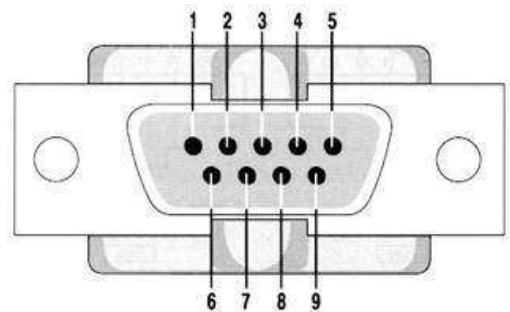

## 6. CONFIGURATION

Connect load cells to the indicator and set following configuration parameters.

Step	Operation	Displaying	Contents
1	Press  and  at same time	Self test from   to	In power off states, press  and  to turn on, self check, and displaying  edition No 1.5 second.
2	Press		Enter of the scale.
	Press		Enter the configuration setting modal.
3	Press		The number of scale divisions selected.
	Press		1 / 2 / 5 / 0.1 / 0.2 / 0.5 / 0.01 / 0.02 / 0.05 / 0.001 / 0.002 / 0.005 / ... For example: d=0.1
4	Press		Sets scale F·S
	Press		Moves the digit at right.
	Press		
	Press		
	Press		For example: F·S=3000
5	Press		Sets display Filter parameters: 00-99
	Press		The display will updata faster and filter faster as the filter parameter is changed from 99-00.
	Press		
	Press		
	Press		For example: FLt=30
6	Press		Sets automatic power off function.
	Press		AUtP=00 Not automatic power off.
	Press		AUtP=01 Automatic power off.
	Press		Digit express the choice of zero trace range (0-9): 1:0.4d 2:0.8d 3:1.2d 4:1.6d 5:2d 6:2.4d 7:2.8d 8:3.2d 9:3.6d. Decimal digit express the choice of zero set 0. Decimal digit=0 no zero set at start operation. Decimal digit >1 zero set at start operation 20% F·S. For example: AUtP=10 (AUtP=10 when leaving the factory)
7	Press		Continuous output: Adr=00
8	Press		Baut rate range: 1200 → 2400 → 4800 → 9600
	Press		For example: b=4800
9	Press		Press to confirm configurations and go to calibration menu.

\* Note: one time accumulation is allowed for weighing once. Following accumulation is allowed for weighing only when displayed value is below 20 d.

## 7. CALIBRATION

Step	Operation	Displaying	Comments
1	Press Press	 	Enters calibration. Zero the scale.
2	Press	 	Starts zero calibration and wait for calibration to complete.
3	Load the standard weight for F·S on the platform, press	 	Starts calibration and wait for calibration to complete.  * If the standard weights can't reach to F.S., 2 3 is recommended to use, press  and  to change the numbers displayed ( the weight value of the weight you use) and then press  to confirm.

Calibration must be done once the parameters are configured.

Pressed three times during calibration or configuration, the indicator will display. To view the A/D counts, press the key when is displayed. Press the key to return to weighing mode.

## 8. ZERO

When the weight is stable, press key for two seconds to set the zero point and zero the display. The status LED is turned on.

## 9. TARE

9.1 Digital tare.

Press key, set tare with and key, then press key. The input data is tare. The status LED is turned on.

## 10. MANUAL WEIGHT ACCUMULATION

When weight is stable, press key to accumulation the current weight to the total weight. The total number of accumulation will be displayed for 1.5 seconds.

## 11. AUTOMATIC MEMORY ACCUMULATION

Selection of manual/automatic accumulation function (Selection of manual / automatic print function).

Selection of animal scale, peak value retain and counting function.

Step	Operation	Displaying	Contents
1	Press		To display times of accumulation.
2	Press		The selection of manual/automatic accumulation AUt = 0, manual accumulation AUt = 1, automatic accumulation and print when weight is added,  indicator is lit. AUt=2, automatic memorize displayed value when weight is added. Accumulate and print final stable values after load down to below 20 d.  indicator is lit.  AUt=3,dynamic weighing method. At weighing >20d: the buzzer sounds "du" and lock is displayed for 6 seconds. Then lock is released for weighing <20d; automatic accumulation and print. Suggest Flt>30.  indicator is list.  AUt=4, peak value fixed weighing method. At weighing>20d, the buzzer sounds "du" and lock is displayed. When weighing <20d, fixed data displays

			with flash, automatic accumulation and print. Lock can be released by pressing any key. <b>AUTO</b> indicator is lit. AUt=5,dynamic weighing method. Manual accumulation and print. AUt=6, peak value fixed weighing method. Manual accumulation and print. AUt=7, counting function. *note
3	Press	<b>AUt 0</b>	Digits displays with flash.
4	Press Press Press	<b>AUt 0</b> <b>AUt 1</b> <b>AUt 2</b> <b>AUt 3</b>	Move blinking digit to the right bit. e.g. AUt=3 expresses dynamic weighing method.
5	Press	<b>0</b>	Return to normal weighing status.

\* note (1) sampling: when net weight on scale is zero (tare can be removed by pressing tare key if net weight is not zero), the sample, wich must be <200 pieces, i.e. between 1 to 199, is put on the scale. Press and , input quantity of the sample (e.g.30), **Cnt030** is displayed.

Press , confirm the completion of sampling. Weighing status is redisplayed. Sampling is memorized even with power off.

Step	Operation	Display	Description
1	Place sample		Place selected sample, weight: 27, quantity: 30.
2	Press Press	<b>Cnt000</b> <b>Cnt000</b>	Ready to input sample's quantity. Decimal digit display with flash.
3	Press Press Press	<b>Cnt010</b> <b>Cnt020</b> <b>Cnt030</b>	
4	Press	<b>27</b>	Display sample's weight: 27,  is a confirmation key, sample collection completed.
5	Press	<b>C 30</b>	Display sample's quantity,  is change-over key between weight and quantity display.

(2) Counting operation: place the object on scale, weight is displayed, press , **C 255** is displayed, and the display changes over to the quantity of the object. When the display is stable, press , accumulate the weight and quantity. Accumulatin can be done only at counting status.

Step	Operation	Display	Description
1	Place object	<b>230</b>	Object weight: 230
2	Press	<b>C 255</b>	Object quantity: 255
3	Press	<b>n 4</b> <b>C 255</b>	Display after 1.5 seconds at counting status.

Status

Step	Operation	Display	Description
1	Press	<b>C 1203</b>	Display the total quantity of the object: 1203
2	Press	<b>H 0</b>	Display accumulated weight 4 digits higher.
3	Press	<b>L 1085</b>	Display accumulated weight 4 digits lower = 1085
4	Press	<b>C 1203</b>	Back to counting status.
5	Press	<b>C 0</b>	Delete accumulated quantity.

(3) accumulate inquires and delete: both at weighing status.

## 12. CLEAR MEMORY

Press **→T←** key. If memory has previously been cleared the display will show **n 0** followed by zero weight when the **FN** key is pressed.

## 13. HOW TO SET DATUM

Press **→** key move and blinks the current digit to.

Press **↑** key increment the current digit to the next available value.

## 14. BATTERY CAPACITY

- When the indicator is being poer on/off, battery capacity will be displayed **PBt 85** for 1.5 seconds.
- When the battery capacity is less than 20%, the display will start to blink, power off the indicator to avoid over discharging battery or connect the external main power suply.
- A full charged battery life is approximately 30 hours.

## 15. UNIT OF WEIGHING (kg and lb)

kg or lb is selectable. The unit of weighing is kg normally. You can change it to lb by pressing and holding **FN** key 2 seconds at least.

## 16. CONNECTION TO MINI-PRINTERS

Connect serial port printer type UP-16TS as follows:

Indicator 9 pin hole		Serial Port Printer 25 pin needle
3	TXT	2
5	GND	7

\* Note: Before connection to printer, communication address is set as Adr=1; baud rate is set as b=9600.

Print operation with serial port printer is as follows:

17.1 Print: at weighing status, weighing data >20d and display is stable, press **M+**, weighing sheet is printed out. The second printing can be operated only when the weighing data is back to <20d.

17.2 Accumulated print: at weighing status, press **FN**, then press **M+**, accumulated printing can be operated.

17.3 Set to be automatic accumulation status, i.e. automatic print.

At weighing status, weighing data >20d and display is stable, weighing sheet is printed out. The second printing can be operated only when the weighing data is back to <20d and more weight is loaded.

Attached with print sample:

Normal printing	Accumulation printing
No:1 (serial number)	No:9 (serial number)
Gross: 3940 kg (gross weight)	W: 8225 kg (accumulated weight)
Tare: 2000 kg (tare weight)	
Net: 1940 kg (net weight)	

## 17. HIGH RESOLUTION DISPLAY MODE

In this display mode, press **↑**, switch to high resolution display mode. (10 times normal display) The last decimal point is light on. Press **↑** key return to normal weight display mode.

## **18.PRECAUTION**

---

- Indicator should be far away from heat resource while using.
- Do not place the indicator in the dusty surroundings or the site vibrant.
- Cannot use full capacity. Over load stops hitting platform support is not permitted.
- To ensure to keep out of chemical erosion, Operating temperature range will be -10...50°C,relative humidity is no less than 85%,without any corrupt gas in air.
- Never pour the water into the indicator.
- Housing, head pallet, wire connector should be sealed entirely. Users do not open sealed device or connect with wire without any expert advice. In case any malfunction of indicator occurs, please sent the indicator for maintenance.
- The indicator will charge the internal battery at all times when it is connected to the main power

VALUE EACH GRAM  
**HiWEIGH**